



**MOTOROLA**

DIGITAL WIRELESS  
TELEPHONE


*User's Guide >*



# Welcome

---

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V120x wireless phone.

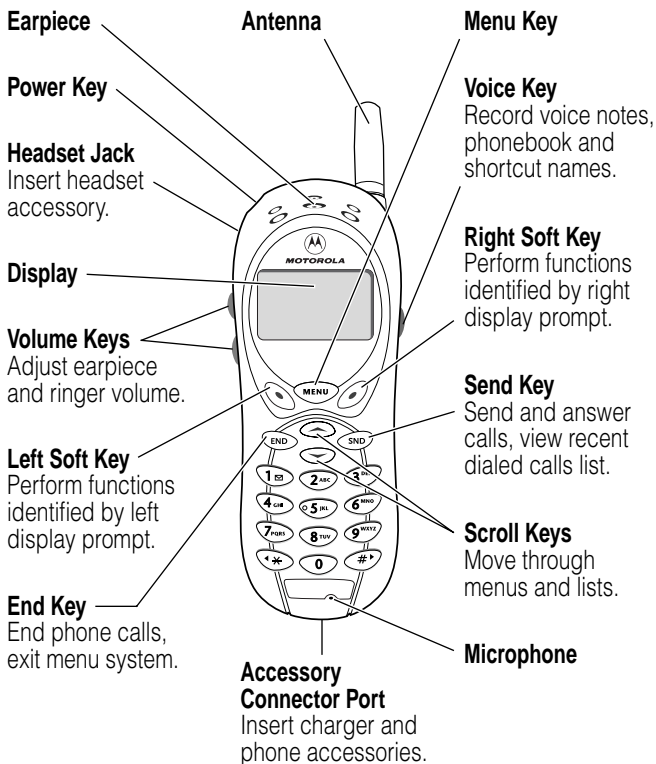

Personal Communications Sector  
600 North U.S. Highway 45  
Libertyville, Illinois 60048

1-800-331-6456 (United States)  
1-888-390-6456 (TTY/TDD United States)  
1-800-461-4575 (Canada)

[www.motorola.com](http://www.motorola.com) (United States)  
[www.motorola.ca](http://www.motorola.ca) (Canada)

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. TrueSync, Sidekick, Starfish, and the Stylized Starfish Logo are registered trademarks of Starfish Software, Inc., a wholly owned independent subsidiary of Motorola, Inc. All other product or service names are the property of their respective owners.

© 2002 Motorola, Inc. All rights reserved.

## **Software Copyright Notice**

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual number: 6809440A47-O  
Cover number: 8988485L49-O



# Menu Map

## Main Menu

- **Recent Calls**
  - Received Calls
  - Dialed Calls
  - Notepad
  - Call Times
- **Phonebook**
- **Datebook**
- **Quick Dial**
- **Radio**
- **Messages**
  - Create Msg
  - Voicemail
  - Text Msgs Inbox
  - Browser Alerts
  - Quick Notes
  - Outbox
  - Drafts
- **Shortcuts**
- **Voice Notes**
- **Browser**
- **Calculator**
- **Games**
- **Settings**  
(see next page)

**Note:** This is the standard phone menu layout. You or your service provider may have changed the menu layout or changed some feature names. Not all features may be available for all users.

For example, the **Radio** feature on the main menu (left) is displayed only when the optional FM Stereo Radio Headset accessory is plugged into the accessory connector port on your phone (see phone illustration, page 1).

Shortcuts
<b>Change display zoom:</b> Press <b>MENU</b> , then press and hold <b>MENU</b>
<b>Lock/unlock keypad:</b> Press <b>MENU</b> <b>*#</b>
<b>Display my phone number:</b> Press <b>MENU</b> <b>#</b>
<b>Dial voicemail number:</b> Press and hold <b>1</b>
<b>Go to dialed calls list:</b> Press <b>SND</b>
<b>Exit menu system:</b> Press <b>END</b>

# Settings Menu



## Ring Styles

- Style
- Style Detail
- My Tones

## Phone Status

- My Tel. Number
- Active Line
- Battery Meter
- Other Information

## Connection

- Incoming Call

## In-Call Setup

- In-Call Timer
- Answer Options

## Security

- Phone Lock
- Lock Keypad
- Lock Application
- Restrict Calls
- New Passwords

## • Other Settings

### • Personalize

- Main Menu
- Keys
- Greeting
- Banner
- Quick Dial

### • Initial Setup

- Time and Date
- Auto PIN Dial
- Auto Redial
- Backlight
- Zoom
- Scroll
- Animation
- Language
- Contrast
- DTMF
- Master Reset
- Master Clear

### • Network

- Car Settings
- Headset

# Contents

---

<b>Menu Map</b>	3
<b>About This Guide</b>	10
<b>Safety and General Information</b>	11
<b>Getting Started</b>	18
What's in the Box?	18
Installing the Battery	18
Charging the Battery	19
Turning Your Phone On	21
Making a Call	21
Ending a Call	22
Answering a Call	22
Seeing Your Phone Number	22
<b>About Your Phone</b>	23
Using the Display	23
Zooming In and Out	25
Adjusting Volume	25
Battery Use	25
<b>Making and Answering Calls</b>	28
Redialing a Number	28
Using Automatic Redial	28
Using Caller ID	29
Returning an Unanswered Call	29
Calling an Emergency Number	30
Turning Off a Call Alert	30
Canceling an Incoming Call	30
Calling With Speed Dial	31
Calling With One-Touch Dial	31

Calling a Number In a Text Message . . . . .	32
Additional Calling Features . . . . .	32
<b>Using Features While On a Call . . . . .</b>	<b>34</b>
Using Call Waiting . . . . .	34
Making a Three-Way Call . . . . .	34
Additional On-Call Features . . . . .	35
<b>Using the Menu . . . . .</b>	<b>36</b>
Navigating to a Feature . . . . .	36
Selecting a Feature Option . . . . .	37
Entering Feature Information . . . . .	38
<b>Entering Text . . . . .</b>	<b>40</b>
Choosing a Text Mode . . . . .	40
Using Tap Method . . . . .	41
Using Symbol Mode . . . . .	44
Using iTAP™ Software Predictive Text Entry Method . . . . .	45
<b>Menu Feature Descriptions . . . . .</b>	<b>49</b>
<b>Recent Calls . . . . .</b>	<b>61</b>
Viewing Received Calls or Dialed Calls . . . . .	61
Using the Notepad . . . . .	63
Viewing and Resetting Call Timers . . . . .	63
<b>Phonebook . . . . .</b>	<b>66</b>
Viewing Entry Details . . . . .	66
Storing a Phonebook Entry . . . . .	66
Storing a PIN Code With the Phone Number . . . . .	69
Recording a Voice Name For a Phonebook Entry . . . . .	70
Dialing a Phonebook Entry . . . . .	71
Editing a Phonebook Entry . . . . .	72
Deleting a Phonebook Entry . . . . .	72
Synchronizing with TrueSync Software . . . . .	72
Sorting the Phonebook List . . . . .	73



<b>Datebook</b> .....	74
Week View .....	74
Day View .....	75
Event View .....	75
Adding a Datebook Event .....	76
Changing Event Information .....	76
Copying an Event .....	77
Deleting an Event .....	78
<b>Radio</b> .....	79
Turning the Radio On and Off .....	79
Tuning a Station .....	80
Storing a Preset .....	80
Selecting a Preset .....	80
Sending and Receiving Calls With the Radio On . . .	80
<b>Messages—Voicemail</b> .....	82
Storing Your Voicemail Number .....	82
Receiving a Voicemail Message .....	83
Listening to a Voicemail Message .....	83
Turning Off the Voice Message Waiting Indicator . . .	83
<b>Messages—Text</b> .....	84
Setting Up the Text Message Inbox .....	84
Receiving a Text Message .....	85
Reading, Locking, or Deleting a Text Message . . .	85
Sending a Text Message .....	87
Sending a Quick Note Text Message .....	89
Viewing the Status of Sent Text Messages .....	90
<b>Ring Styles</b> .....	91
Selecting a Ring Style .....	91
Customizing a Ring Style .....	91
Creating Alert Tones .....	93
Setting Reminders .....	98

<b>Shortcuts</b> .....	99
Standard Shortcuts .....	99
Creating a Shortcut .....	99
Using Shortcuts .....	101
<b>Voice Notes</b> .....	102
Recording a Voice Note .....	102
Viewing the Voice Notes List .....	103
Playing a Voice Note .....	104
Locking and Unlocking a Voice Note .....	106
Deleting a Voice Note .....	107
<b>Micro-Browser</b> .....	108
Starting a Micro-Browser Session .....	108
Interacting With Web Pages .....	109
<b>Calculator</b> .....	110
Calculating Numbers .....	110
Converting Currency .....	112
<b>Games</b> .....	113
Playing a Game .....	113
Game Options .....	114
Blackjack .....	114
Mindblaster .....	116
Paddleball .....	117
<b>Adjusting Your Settings</b> .....	118
Reordering Menu Items .....	118
Customizing a Soft Key Function .....	118
Hands-Free Use .....	119
<b>Data and Fax Calls</b> .....	122
Connecting Your Phone to an External Device ....	122
Sending a Data or Fax Call .....	125
Receiving a Data or Fax Call .....	126

<b>Security</b> .....	128
Assigning a New Code or Password .....	128
If You Forget a Code or Password .....	129
Locking and Unlocking Your Phone .....	130
Locking and Unlocking Your Keypad .....	131
Restricting Calls .....	131
<b>Troubleshooting</b> .....	133
<b>Programming Instructions</b> .....	142
<b>Specific Absorption Rate Data</b> .....	144
<b>Additional Health and Safety Information</b> .....	147
<b>Warranty</b> .....	156
<b>Product Registration</b> .....	164
<b>Export Law Assurances</b> .....	164
<b>Index</b> .....	165
<b>Wireless Phone Safety Tips</b> .....	177

# About This Guide

---


This user guide introduces you to the many features in your Motorola wireless phone.

## Navigating To a Menu Feature

Use the menu system to access your phone's features. This guide shows you how to select a menu feature as follows:

### Find the Feature

 > Messages  
> Text Msgs

This example shows that you must press , scroll to and select **Messages**, then scroll to and select **Text Msgs**.

## Optional Features



This label identifies an optional network or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

## Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.

# ***Safety and General Information***

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information contained in user guides published prior to July 2000. For information regarding radio use in a hazardous atmosphere please refer to the Factory Mutual (FM) Approval Manual Supplement or Instruction Card, which is included with radio models that offer this capability.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## ***RF Operational Characteristics***

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits radio frequency (RF) energy. The phone operates in the frequency range of 824 MHz to 849 MHz in analog and digital mode and 1851.25 MHz to 1908.75 MHz in digital mode.

When you communicate with your phone, the system handling your call controls the power levels at which your phone transmits. The output power level typically may vary over a



range from 0.05 watts to 0.56 watts in analog mode and 0.0 watts to 0.32 watts in digital mode.

## ***Exposure To Radio Frequency Energy***

Your Motorola phone is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy:

- United States Federal Communications Commission, Code of Regulations; 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95.1-1992
  - Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
  - National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation-Human Exposure) Standard 1999

To assure optimal phone performance and make sure human exposure to radio frequency electromagnetic energy is within

the guidelines set forth in the above standards, always adhere to the following procedures:

## ***Portable Phone Operation and EME Exposure***

### ***Antenna Care***

**Use only the supplied or an approved replacement antenna.** Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

**Do NOT hold the antenna when the phone is in use.**

Holding the antenna affects call quality and may cause the phone to operate at a higher power level than needed.

### ***Phone Operation***

When placing or receiving a phone call, hold your phone as you would a wireline telephone. **Speak directly into the microphone.**

### ***Body-Worn Operation***

To maintain compliance with FCC/Health Canada RF exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this product. Use of non-Motorola-approved accessories may exceed FCC/Health Canada RF exposure guidelines. If you do not use one of the Motorola-supplied or approved body-worn accessories, and are not using the phone held in the normal use position, **ensure the phone and its antenna are at least one inch (2.5 centimeters) from your body when transmitting.**



## ***Data Operation***

When using any data feature of the phone, with or without an accessory cable, **position the phone and its antenna at least one inch (2.5 centimeters) from your body.**

## ***Approved Accessories***

For a list of approved Motorola accessories, visit our website at [www.mot.com](http://www.mot.com).

## ***Electromagnetic Interference/Compatibility***

**Note:** Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.



### ***Facilities***

To avoid electromagnetic interference and/or compatibility conflicts, turn off your phone in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

### ***Aircraft***

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

### ***Medical Devices***

#### **Pacemakers**

The Advanced Medical Technology Association recommends that a minimum separation of 6 inches (15 centimeters) be



maintained between a handheld wireless phone and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, the United States Food and Drug Administration.

Persons with pacemakers should:

- ALWAYS keep the phone more than six inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

## **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

## **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

## ***Safety and General Use While Driving***

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.



When using your phone while driving, please:

- give full attention to driving and to the road.
- use hands-free operation, if available.
- pull off the road and park before making or answering a call if driving conditions so require.

## ***Operational Warnings***

### ***For Vehicles With an Air Bag***

Do not place a portable phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

### ***Potentially Explosive Atmospheres***

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless the phone is a model specifically identified as being “Intrinsically Safe.” Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.

## ***Blasting Caps and Areas***

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

## ***Operational Cautions***

### ***Antennas***

**Do not use any portable phone that has a damaged antenna.** If a damaged antenna comes into contact with your skin, a minor burn can result.

### ***Batteries***

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

ITC01-101



# Getting Started

---

## What's in the Box?

Your wireless phone typically comes equipped with a battery and a charger. Other accessory options can customize your phone for maximum performance and portability.

To purchase Motorola Original™ accessories, contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

## Installing the Battery

You must install and charge the battery to use your phone.



Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.


### Do This

- 1 Remove the battery from its protective clear plastic case.




## Do This

- 2 If necessary, slide down the battery door release latch and lift the door off of the phone.

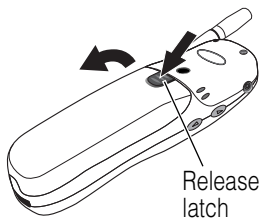

- 3 Insert the battery, printed arrows first, into the top of the battery compartment and push down.

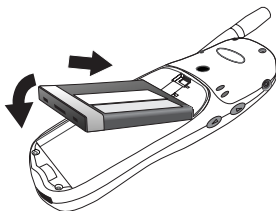

- 4 Replace the battery door.

## Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery, as indicated by the following instructions.



Some batteries perform best after several full charge/discharge cycles.

### Do This

- 1 Plug the travel charger into your phone with the release tab facing up.



- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates that the battery is fully charged (**Charge Complete**), press the release tab and remove the travel charger.

**Note:** When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete.





# Turning Your Phone On

## Do This

## To

- 1 Press and hold  turn on your phone

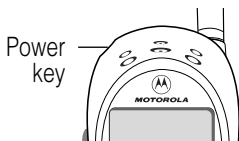

- 2 If necessary, enter your four-digit unlock code and press **OK** ()

unlock your phone



The unlock code is originally set to 1234. Your service provider may change this number before you receive your phone.

# Making a Call

## Press

## To

- 1 keypad keys dial the phone number

**Tip:** If you make a mistake, press **DELETE** () to delete the last digit, or press and hold **DELETE** () to clear all digits.

- 2



make the call



## Ending a Call

Press	To
	end the call



## Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
 or <b>ANSWER</b> 	answer the call

**Tip:** If your phone is locked, you must unlock it to answer the call.

## Seeing Your Phone Number

Press	To
 	see your phone number








# About Your Phone

See page 1 for a basic phone diagram.

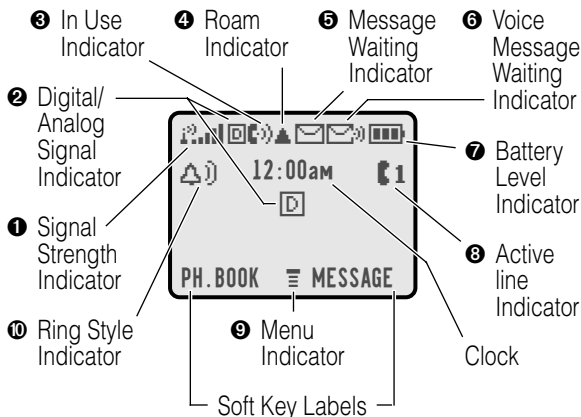
## Using the Display



The *idle display* is the standard display that you see when you are *not* on a call or using the menu.

Labels at the bottom corners of the display show the current soft key functions. A  (menu) indicator at the bottom center of the display indicates that you can press  to enter the main menu.



**❶ Signal Strength Indicator** Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator is displayed.



**❷ Digital (D) or Analog (A) Signal Indicator** Shows whether you are receiving a digital or analog signal.

**❸ In Use Indicator** Shows that a call is in progress.



**❹ Roam Indicator** Shows that your phone is seeking or using another network system outside your home network.



**❺ Message Waiting Indicator** Appears when you receive a text message.




**❻ Voice Message Waiting Indicator** Appears when you receive a voicemail message.

**❼ Battery Level Indicator** Vertical bars show the battery charge level. Recharge the battery when you see **Low Battery** and hear the low battery alert.





**❽ Active Line Indicator** Shows the current active phone line.

**❾ Menu Indicator** Indicates that you can press  to enter the main menu or open a feature sub-menu.




**10 Ring Style Indicator** Shows the ring style setting.

 = loud ring



 = soft ring

 = vibrate

 = vibrate and ring

 = silent

## Zooming In and Out


Press and release , then press and hold  to zoom in and out on the display. Zoom in to increase text size, zoom out to display more information.

You can also zoom in and out from the menu. See page 57.

## Adjusting Volume

Press the up and down volume keys to:

- increase and decrease earpiece volume during a call
- increase and decrease the ringer volume setting when the idle display is visible

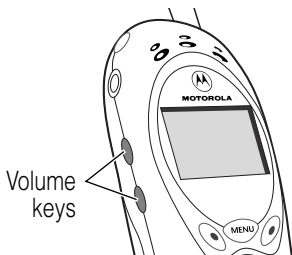

## Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your



phone; the features and/or settings you select and use; and your voice, data, and other application usage patterns.

## ***Battery Care***

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original™ batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over extended periods of time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.





The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods. Never dispose of batteries in a fire because they may explode.

## ***Extending Battery Life***

- **Turn off your display backlight**

The backlight uses power. To turn it off, see page 57.

- **Minimize keypad-intense functions**

Activities that require intensive keystroke use (such as playing a game or using messaging) reduce your phone's talk and standby time. Lock the keypad when storing the phone in your purse or pocket to avoid unnecessary keypad and backlight activations. See page 131.



# Making and Answering Calls



For basic instructions on how to make a call, end a call, and answer a call, see pages 21–22.

## Redialing a Number

If you hear an ordinary busy signal:

Press	To
1	hang up
2	redial the busy number

## Using Automatic Redial

If the network is busy, you hear a fast busy signal, and your phone displays **Call Failed**.

With automatic redial, your phone automatically redials the number for four minutes. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

You must turn on automatic redial to use the feature. See the “Auto Redial” option on page 56.

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a fast busy signal and see **Call Failed**:

Press	To
<b>SND</b> or <b>RETRY</b> (⦿)	activate automatic redial



## Using Caller ID



*Calling line identification* (caller ID) displays the phone number for incoming calls.

The phone displays the caller's name when the name is stored in your phonebook, or

**Incoming Call** when caller ID information is not available.

## Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:


- the **☎** (missed call) indicator
- X Missed Calls Y Unknown**, where **X** is the total number of missed calls and **Y** is the number of missed calls with no caller ID information

Press	To
<b>1</b> <b>VIEW</b> (⦿)	see the received calls list
<b>2</b> (⦿)	select a call to return
<b>3</b> <b>SND</b>	make the call

## Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.

**Note:** Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number



## Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.

Press	To
either volume key	turn off the alert

## Canceling an Incoming Call

While the phone is ringing or vibrating:

Press	To
 or IGNORE (  )	cancel the incoming call







Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.



## Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique *speed dial* number. To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 	submit the number
	<b>Note:</b> Some networks let you skip this step for speed dial numbers 1 through 99.
3 	call the entry



## Calling With One-Touch Dial





To call phonebook entries 1 through 9, just press and hold the one-digit speed dial number for one second.

We recommend that you reserve phonebook entry 1 (speed dial number 1) for storing and dialing your voicemail number. In many cases, your service provider has already done this for you. If necessary, see page 66 to store your voicemail number for one-touch dial access.

## Calling a Number In a Text Message





To call a phone number embedded in a text message that you receive:


Press	To
1 	open the <b>Text Msg Menu</b>
2  	scroll to <b>Call Back</b>
3 <b>SELECT</b> 	call the number

## Additional Calling Features

While dialing (with digits visible in the display), open the **Dialing Menu** to perform the following tasks:

Press	To
 > <b>Attach Number</b>	attach a number from the phonebook or recent call lists
 > <b>Send Message</b>	open a new text message with the number in the <b>To</b> field

You can also call a number using these features:

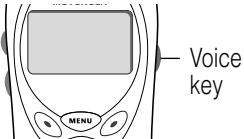Do This	To Call
<p>Press and release the voice key, then say a voice name</p>  <p>The diagram shows a top-down view of a mobile phone. A line points from the text 'Voice key' to a small circular button on the right side of the phone. Below the screen, there is an oval button labeled 'MENU'.</p>	<p>a phonebook entry using voice dial</p> <p>To record a voice name, see page 70.</p>
<p>Press <b>MENU</b> &gt; <b>Recent Calls</b> &gt; <b>Received Calls</b> or <b>Dialed Calls</b> &gt; <i>entry to call</i></p>	<p>a missed call, or a recent received or dialed call</p>





# Using Features While On a Call

## Using Call Waiting







When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1 	answer the new call
2 	switch back to the first call

## Making a Three-Way Call



During a call, you can call and connect a third party for a three-way call. You cannot do this if you already have a call on hold.

Press	To
1 keypad keys	dial the third party's number
<b>Note:</b> On some networks, you must press  first.	
2 	call the number
3 	connect the two calls
4 	end the entire call

# Additional On-Call Features

Press	To
<b>MUTE</b> (📞) (if available) or <b>MENU</b> > <b>Mute</b>	mute the call
<b>SPEAKER</b> (📞) (if available) or <b>MENU</b> > <b>Spkrphone On</b>	activate an attached speakerphone during an active call
<b>MENU</b> > <b>My Tel. Number</b>	see your phone number
<b>MENU</b> > <b>Send Tones</b>	send a number to the network as DTMF tones, for credit card or password calls  To activate DTMF tones, see the “DTMF” option on page 58.
<b>MENU</b> > <b>Received Calls</b> or <b>Dialed Calls</b>	view recent received or dialed call numbers
<b>MENU</b> > <b>Messages</b>	view or send messages
<b>MENU</b> > <b>Datebook</b>	view datebook entries
<b>MENU</b> > <b>Other Information</b>	view phone specifications



# Using the Menu

## Navigating to a Feature

Use these keys to move through the menu system:


### Left Soft Key

Perform the function shown in the lower left corner of the display (usually **EXIT** or **BACK**).

### Right Soft Key

Perform the function shown in the lower right corner of the display (usually **SELECT** the highlighted menu item).

### Menu Key

Enter the menu system, or open a sub-menu, when  appears in the bottom center of the display.


### End Key

Exit the menu system without making changes, return to the idle display.

### Scroll Keys


Scroll up or down through menus and lists.

 and   
Cycle through and set the value of the highlighted menu item.

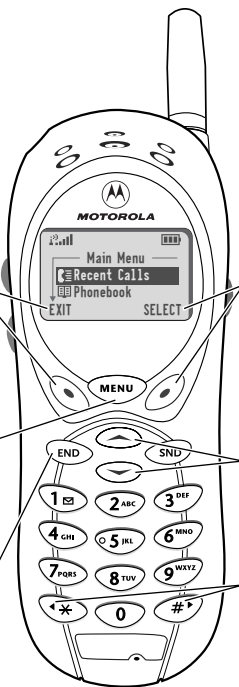

## Selecting a Feature Option

Some features require you to select an item from a list:

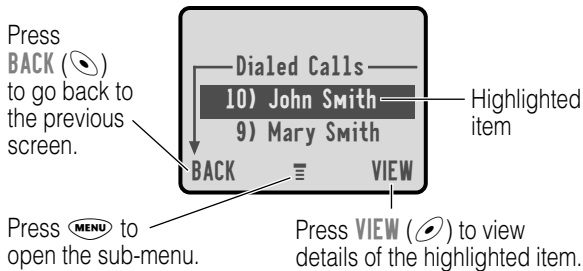



- Press ⬆️/⬆️ to scroll up or down to highlight the item you want.
- In a numbered list, press a number key to highlight the item.
- In an alphabetized list, press a key multiple times to cycle through the letters on the key and highlight the closest matching list item.



# Entering Feature Information

Some features require you to enter information:

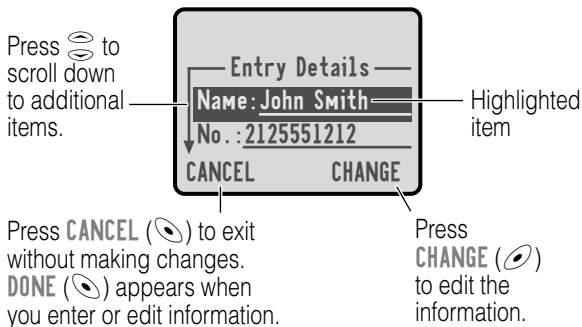

- 
- Enter numbers or text with the keypad.
  - When an item has a list of possible values, press or to scroll through and select a value.
  - When an item has a list of possible numeric values, press a number key to set the value.
  - If you enter or edit information and do not want to save your changes, press to exit without saving.



The message center lets you compose and send text messages. A *flashing cursor* shows where text will appear:

*Flashing cursor* indicates insertion point.



Press **BROWSE** (👁) to view and insert a quick note.

Press **CANCEL** (👁) to exit without making changes.

Press **MENU** to open the sub-menu.

When you enter text using the standard tap method, the flashing cursor changes to a *block cursor*, and the soft key functions change:

*Block cursor* indicates current highlighted character.



Press **OK** (👁) to accept and store the text.

After two seconds, the block cursor reverts to a flashing cursor and moves to the next position.

Press **DELETE** (👁) to delete the character to the left of the insertion point.




# Entering Text

---

Multiple text entry methods make it easy for you to enter names, numbers, and messages on your phone.

## Choosing a Text Mode

Press  from any text entry screen to select a text mode:


- |                   |   |
|-------------------|---|
| <b>iTAP</b>       | Let the phone predict each word as you enter it. See page 45.                         |
| <b>Tap Method</b> | Enter letters, numbers, and symbols by pressing a key one or more times. See page 41. |
| <b>Numeric</b>    | Enter numbers only.   |
| <b>Symbol</b>     | Enter symbols only. See page 44.  |
| <b>Browse</b>     | Browse your phonebook or recent call lists to select a name or number.                |


**Note:** The text mode you select remains active until you change it by selecting another mode.



# Using Tap Method

This is the standard mode for entering text on your phone.

Press  from any text entry screen and select the **Tap Method** menu option.

Do This	To
1 Press a number key one or more times	select a letter, number, or symbol shown in the "Character Chart" on page 43
2 Continue pressing number keys	enter the remaining characters
3 Press <b>OK</b> (  )	store the text when you are finished


## General Text Entry Rules

Press a number key repeatedly to cycle through its characters. See "Character Chart" on page 43.



Press a number key as many times as necessary to enter the desired character at flashing cursor location.


Press and hold a number key to cycle between text entry modes.

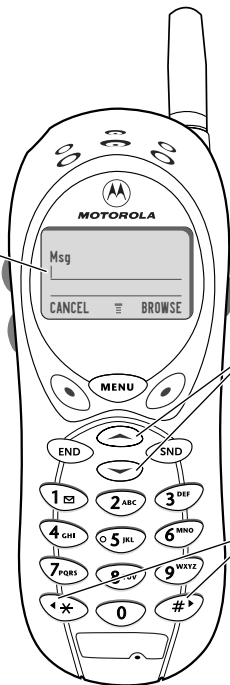


Change letter in block cursor to uppercase or lowercase.

Move flashing cursor to the left or right in text message.











- If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.

- The first character of every sentence is capitalized. (Press  down to force the character to lowercase while it is highlighted by the block cursor).
- Your phone may support multiple languages. The current language setting determines whether a new message begins on the left or right side of the display.

You can switch languages within a message. Press  to select the text mode and language you want to use.


## Character Chart




Use this chart as a guide for entering spaces, letters, numbers, and symbols with the tap method.

	space . 1 ? ! , @ _ & ~ : ; " - ( ) ' ` ¨ % £ \$ ¥ ¤ €
	a b c 2 ä å á à â ã α β ç
	d e f 3 δ ë é è ê ε φ
	g h i 4 ï í î γ η ι
	j k l 5 κ λ
	m n o 6 ñ ö ø ó ò ô õ μ υ ω
	p q r s 7 π β σ
	t u v 8 θ ü ú ù û τ
	w x y z 9 ξ ψ
	+ - 0 x * / \ [ ] = > < # §

**Note:** This chart may not reflect the exact character set available on your phone.





# Using Symbol Mode

Your phone provides an alternate way to enter symbol characters in a message. Press  from any text entry screen and select the **Symbol** menu option.

Do This	To
1 Press a number key one time	display its symbol options at the bottom of the display  See "Symbol Chart" on page 44.
2 Press  or   or  Press the number key multiple times	highlight the symbol you want
3 Press <b>SELECT</b> 	enter the symbol at the flashing cursor location

## Symbol Chart


Use this chart as a guide for entering characters in symbol mode.

	space . ? ! , @ _ & ~ : ; " - ( ) ' ` i % £ \$ ¥ ¤ €
	@ _ \
	/ : ;
	" & '

5 <sub>REL</sub>	( ) [ ] { }
6 <sub>MNO</sub>	¿ ¡ ~
7 <sub>QRS</sub>	< > =
8 <sub>TUV</sub>	\$ £ ¥ ¤ €
9 <sub>WXYZ</sub>	# % *
0	+ - x * / = > < # §

## Using iTAP™ Software Predictive Text Entry Method

iTAP™ software provides a predictive text entry method that lets you enter a word using one keypress per letter.


Press  from any text entry screen and select the iTAP menu option.

### Enter Words

Do This	To
1 Press a number key one time	enter the first letter of the word  The letters associated with the key are shown at the bottom of the display.
2 Press number keys (one per letter)	enter the rest of the word  Alternative words and letter combinations are shown at the bottom of the display. The word choices are updated with each keypress.

Do This	To
3 Press  or  highlight the word you want	
4 Press <b>SELECT</b>	enter the word at the flashing cursor location
	A space is automatically inserted after the word.

For example, to spell the word “act,” press . The display shows:

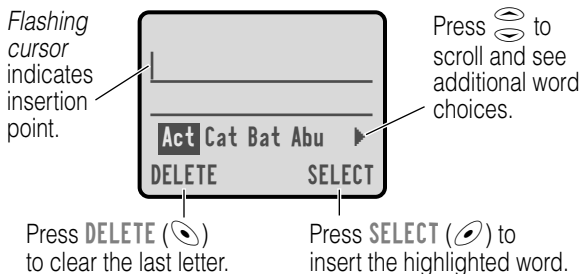

## Enter Novel Words

You may enter a word that the iAP software does not recognize. If the word you want is not displayed:

Do This	To
1 Press <b>DELETE</b> one or more times	delete letters until you see a letter combination that matches the start of the word



Do This	To
2 Press  or	highlight the letter or letter combination
3 Press <b>SELECT</b> (), then press	shift the text entry cursor to the left and "lock" the selected word portion
4 Continue to enter letters and highlight letter combinations	spell the word

## Punctuation

Press	To
or	enter punctuation or other characters as shown in the "Character Chart" on page 43

## Capitalization

The first word of a sentence is automatically capitalized, with following words in lowercase.

Press	To
	change the words to initial character capitalized, all uppercase characters, or all lowercase characters

## Enter Numbers

Do This	To
1 Enter the first digit and then highlight it	put the iTAP software in number entry mode
2 Press number keys	add digits to the number
3 Press <b>SELECT</b> (⦿)	enter the number at the flashing cursor location

## Delete Letters and Words

Place the cursor to the right of the text you want to delete, and then do the following:

Do This	To
Press <b>DELETE</b> (⦿)	delete one letter at a time
Hold <b>DELETE</b> (⦿)	delete the entire message

# Menu Feature Descriptions

---

This chapter describes all of your phone's features in order of the menu map shown on pages 3–4.

## Main Menu

### RECENT CALLS

#### **Received Calls**

 > Recent Calls  
> Received Calls

View a list of recently received calls. See page 61.

#### **Dialed Calls**

 > Recent Calls  
> Dialed Calls

View a list of recently dialed calls. See page 61.

#### **Notepad**

 > Recent Calls  
> Notepad

Call or store the last number entered on the keypad.  
See page 63.

#### **Call Times**

 > Recent Calls  
> Call Times

View call timers that track time spent on your last call, dialed calls, received calls, all calls since reset, and all calls total. See page 63.



**PHONEBOOK** > **Phonebook**

Store names and numbers as entries in your phonebook, then call numbers by selecting them from the phonebook list. See page 66.

**DATEBOOK** > **Datebook**


Use the datebook calendar to schedule and review your appointments. See page 74.

**QUICK DIAL** > **Quick Dial**

Dial pre-programmed numbers. Your service provider may program your phone with one or more quick dial numbers, such as the customer service number. You can call them by selecting them from the quick dial list.



**Note:** Your service provider may use a different name for this feature.

**RADIO** > **Radio**

Listen to FM radio stations with the optional Motorola Original™ FM Stereo Radio Headset accessory. This menu feature is displayed only when the FM Stereo Radio Headset is plugged into the accessory connector port on your phone. See page 79.

**MESSAGES** > **Messages**

Adjust message settings, view and manage the various types of messages your phone can receive and/or send:

**Create Msg**

Create new text messages.  
See page 87.



<b>VoiceMail</b>	Listen to your recorded voice messages. See page 82.
<b>Text Msgs Inbox</b>	Read and manage text messages. See page 84.
<b>Browser Alerts</b>	Read alert messages received by your micro-browser.
<b>Quick Notes</b>	Select and send pre-written messages from the quick notes list. See page 89.
<b>Outbox</b>	View all outgoing text messages, delivered and undelivered.
<b>Drafts</b>	Store and edit text messages that you have written but not sent.

## SHORTCUTS

 > **Shortcuts**

Create keypad or voice shortcuts to menu features. See page 99.

## VOICE NOTES

 > **Voice Notes**

Use the voice key to record messages and phone calls. See page 102.

**Note:** Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.




**BROWSER** > **Browser**

Access Web pages and run Web-based applications. The micro-browser delivers WAP (Wireless Application Protocol) pages from your service provider directly to your phone. See page 108.

**CALCULATOR** > **Calculator**

Use your phone as a calculator or currency converter. See page 110.

**GAMES** > **Games**

Play games on your phone. See page 113.

## **Settings Menu**

**RING STYLES****Style** > **Settings** > **Ring Styles**  
> **Style**

Select the ring style your phone uses to notify you of incoming calls, messages, or other events. See page 91.

**Style Detail** > **Settings** > **Ring Styles**  
> **Style Detail**

Change details about the current ring style. *Style* represents the name of the ring style. See page 91.

**My Tones** > **Settings** > **Ring Styles**  
> **My Tones**

Create custom alert tones for your phone. See page 93.

## PHONE STATUS

### ***My Tel. Number***

-  > Settings  
> Phone Status  
> My Tel. Number

View, enter, and edit information about your name and phone number.

### ***Active Line***

-  > Settings  
> Phone Status  
> Active Line



Change the active phone line to send and receive calls from either of the available numbers.

### ***Battery Meter***

-  > Settings  
> Phone Status  
> Battery Meter

View a detailed battery charge meter.

### ***Other Information***

-  > Settings  
> Phone Status  
> Other Information



View your phone's feature specifications (if available from the service provider).

## CONNECTION

Connect your phone to a computer or hand-held device to send and receive data and fax calls on the connected device. See page 122.



**Incoming Call**

 > **Settings**  
 > **Connection**  
 > **Incoming Call**

Specify the format for the next incoming call. You can select **Fax In Only**, **Data In Only**, or **Normal**. See page 126.

**IN-CALL SETUP**

Set the features that are active during a call, such as the in-call timer and call answering options.

**In-Call Timer**

 > **Settings**  
 > **In-Call Setup**  
 > **In-Call Timer**

Adjust call timer **Display** and **Beep** settings. You can set your timer to beep at a selected interval during your calls. (60 seconds is the default.) You can also turn on or off a display timer during calls as follows:

<b>Time</b>	Display the elapsed time for the current call.
<b>Off</b>	No in-call timer display.

**Answer Options**

 > **Settings**  
 > **In-Call Setup**  
 > **Answer Options**

Turn call answering options on or off:

<b>Multi-Key</b>	Answer by pressing any key.
------------------	-----------------------------

**SECURITY****Phone Lock**

 > **Settings** > **Security**  
 > **Phone Lock**

Lock and unlock your phone. See page 130.



**Lock Keypad**

 > Settings > Security  
> Lock Keypad

View instructions on how to lock and unlock your keypad. See page 131.

**Lock Application**

 > Settings > Security  
> Lock Application

Lock and unlock specific phone applications (such as phonebook or datebook). When an application is locked, users must enter the unlock code to use the application.

**Restrict Calls**

 > Settings > Security  
> Restrict Calls

Restrict incoming and outgoing calls. See page 131.

**New Passwords**

 > Settings > Security  
> New Passwords

Change your unlock code (originally set to 1234) or your security code (originally set to 000000). See page 128.

**OTHER SETTINGS****Personalize**

 > Settings  
> Other Settings  
> Personalize

Set several personal phone options:

**Main Menu**

Change the order of the main menu. See page 118.

**Keys**

Change the functions of the soft keys in the idle display. See page 118.



**Greeting**

Change the text displayed when you turn on your phone.

**Banner**

Change the text that appears in the idle display.

**Quick Dial**

Change quick dial number(s).

**Initial Setup**

**MENU** > **Settings**  
> **Other Settings**  
> **Initial Setup**

Set many basic phone options:

**Time and Date**

Set the phone's time and date.

**Auto PIN Dial**

Some networks require an authenticating PIN code to allow outgoing calls. Use this feature to automatically dial your PIN.

**Auto Redial**

Use this option to turn on or turn off the automatic redial feature. When you turn on automatic redial, your phone automatically redials calls that fail due to busy network conditions. See page 28.



<b>Backlight</b>	Set the amount of time that the display backlight remains on, or turn off the backlight to conserve battery power.
<b>Zoom</b>	Switch between three lines ( <b>Zoom Out</b> ) and two lines ( <b>Zoom In</b> ) of display text.
<b>Scroll</b>	Force the cursor to stop or wrap around when it reaches the top or bottom of a list in the display.
<b>Animation</b>	Turn animation off (to conserve battery power) or on. Animation makes your phone's menus move smoothly as you scroll up and down.
<b>Language</b>	Set the language for phone menus.
<b>Contrast</b>	Adjust the contrast setting for your display.



## DTMF

Your phone can send a number to the network as dual tone multi-frequency (DTMF) tones. DTMF tones are used to communicate with automated systems that require you to enter a number such as a code, password, or credit card number. User this option to set DTMF tones to be long, short, or off.

## Master Reset

Reset all options back to their original factory settings *except* for the unlock code, security code, and lifetime timer.



**Master Clear**

Reset all options back to their original factory settings *except* for the unlock code, security code, and lifetime timer, *and* clear all user settings and entries.

**Note:** This option *erases all user-entered information* stored in your phone's memory, including phonebook and datebook entries. Once you erase the information, it cannot be recovered.

**Network**

 > Settings  
> Other Settings  
> Network



View and adjust your phone's network settings.

Your service provider registers your phone to a network. You can view information about the current network, change how your phone searches for a network, and activate alerts that indicate when a call is dropped or network registration changes.

**Car Settings**

 > Settings  
> Other Settings  
> Car Settings



Adjust hands-free car kit settings.

You can set your phone to route calls directly to the car kit when it detects a connection, and

automatically answer calls after two rings. See page 119.

**Note:** The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

### **Headset**

 > Settings  
> Other Settings  
> Headset




Set your phone to automatically answer calls after two rings when connected to a headset. See page 119.



# Recent Calls






## Viewing Received Calls or Dialed Calls

Your phone keeps a list of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new ones are added.

**Shortcut:** Press  to go directly to the dialed calls list from the idle display.




### Find the Feature

 > Recent Calls

Press	To
1  	scroll to <b>Received Calls</b> or <b>Dialed Calls</b>
2 <b>SELECT</b> (  )	select the list
3  	scroll to an entry
<b>Note:</b> ✓ means the call connected.	





Press	To
4 	call the entry's number
or	
VIEW 	view entry details
or	
	open the <b>Last Calls Menu</b> to perform other procedures as described in the following list

The **Last Calls Menu** includes the following options:

Option	Description
<b>Store</b>	Create a phonebook entry with the number in the <b>No.</b> field.
<b>Delete</b>	Delete the entry.
<b>Delete All</b>	Delete all entries in the list.
<b>Send Message</b>	Open a new text message with the number in the <b>To</b> field.
<b>Add Digits</b>	Add digits after the number.
<b>Attach Number</b>	Attach a number from the phonebook or recent call lists, after the highlighted number.
<b>Send Tones</b>	Send the number to the network as DTMF tones, for credit card or password calls.



# Using the Notepad

Your phone stores the most recent string of digits entered on the keypad in a temporary memory location called the *notepad*. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

## Find the Feature

 > Recent Calls  
> Notepad

## Press



or



or

STORE 

## To


call the number

open the **Dialing Menu** to  
attach a number or insert a  
special character

create a phonebook entry  
with the number in the **No.**  
field

---

## Viewing and Resetting Call Timers

*Network connection time* is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.





The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.





You can view the following network connection times:

Timer	Description
<b>Last Call</b>	Time spent on last dialed or received call. You cannot reset this timer.
<b>Dialed Calls</b>	Time spent on dialed calls since the last time you reset this timer.
<b>Received Calls</b>	Time spent on received calls since the last time you reset this timer.
<b>All Calls</b>	Time spent on dialed and received calls since the last time you reset this timer.
<b>Lifetime</b>	Time spent on all calls on this phone. You cannot reset this timer.



To view a call timer:

### Find the Feature

 > Recent Calls  
> Call Times

Press	To
1 	scroll to the timer you want\
2 <b>SELECT</b> (  )	view the recorded time

To reset the call timer:

Press	To
1 <b>RESET</b> (  )	reset the time (if available)
2 <b>YES</b> (  )	confirm the reset



# Phonebook







You can store a list of names and phone numbers or email addresses in your phone's electronic phonebook.

To see the names in your phonebook, press

**MENU** > **Phonebook** from the idle display. Scroll to a name and press **VIEW** (⦿) to view details of the phonebook entry as shown below.

## Viewing Entry Details

**Type** indicator identifies number type:

-  Work
-  Home
-  Main
-  Mobile
-  Fax
-  Pager
-  Email

**Voice Name** indicator indicates a recorded voice name

Entry's **Name**


Entry's **phone number** or **email address**

Entry's speed dial number

Return to list

Press **MENU** to open the **Phonebook Menu**

Edit entry

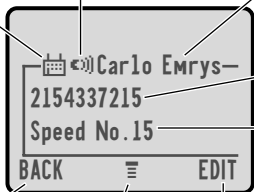

## Storing a Phonebook Entry

A phone number or email address is required for a phonebook entry. All other information is optional.

**Shortcut:** Enter a phone number in the idle display, then press **STORE** (ⓘ) to create a phonebook entry with the number in the **No.** field. Go directly to step 3 to continue.

## Enter Information

### Find the Feature

**MENU** > Phonebook

**MENU** > New

Press	To
1 ⓘ ⓘ	scroll to <b>Phone Number</b> or <b>Email Address</b>
2 <b>SELECT</b> ⓘ	select the entry type
3 <b>CHANGE</b> ⓘ	select <b>Name</b>
4 keypad keys	enter a name for the entry
5 <b>OK</b> ⓘ	store the name
6 <b>CHANGE</b> ⓘ	select <b>No.</b> or <b>Email</b>
7 keypad keys	enter the phone number or email address
	<b>Tip:</b> You can store a PIN code with the phone number. See page 69.
8 <b>OK</b> ⓘ	store the phone number or email address
9 <b>CHANGE</b> ⓘ	select <b>Type</b>
	<b>Note:</b> This option is not available for email entries.
10 ⓘ ⓘ	scroll to the number type
11 <b>SELECT</b> ⓘ	select the number type





Press	To
<b>12 RECORD</b> (👁) or Go to step 13 if you do not want a voice name	record a voice name for the entry, if desired (see page 70)
<b>13</b> (👁) (👁)	scroll to <b>Speed No.</b>  The next available speed dial number is assigned to a new phonebook entry.
<b>14 CHANGE</b> (👁)	select <b>Speed No.</b> if you want to change it
<b>15</b> keypad keys	enter a different speed dial number, if desired
<b>16 OK</b> (👁)	store the speed dial number
<b>17 SELECT</b> (👁)	select <b>MORE</b> if you want to create another entry under the same <b>Name</b>  You must use a different <b>Type</b> identifier for each number.




## Complete Phonebook Entry

When you are finished entering information for a phonebook entry:

Press	To
<b>DONE</b> (👁)	store the entry

# Storing a PIN Code With the Phone Number

You can store a PIN code with the phone number for calls that require additional digits (for example, to make a calling card call, or to retrieve voicemail or answering machine messages). Insert one or more of the following characters in the dialing sequence to ensure that the number dials and connects properly:

Press	To
 > <b>Insert Pause</b>	insert a <b>p</b> (pause) character  Your phone dials the preceding digits, waits for the call to connect, then sends the remaining digit(s).
 > <b>Insert Wait</b>	insert a <b>w</b> (wait) character  Your phone dials the preceding digits, waits for the call to connect, then prompts you for confirmation before it sends the remaining digit(s).
 > <b>Insert 'n'</b>	insert an <b>n</b> (number) character  Your phone prompts you for a number before dialing the call. The number you enter is inserted into the dialing sequence in place of the <b>n</b> character



**Note:** You can store a maximum of 32 digits per number. Each character counts as one digit.

## Recording a Voice Name For a Phonebook Entry







You can record a voice name for a new or existing phonebook entry. A voice name lets you call the phonebook entry using voice dial (see page 71).

**Tip:** Make your recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.



### Find the Feature

 > Phonebook

Do This	To
1 Press 	scroll to the entry
2 Press <b>VIEW</b> (  )	view entry details
3 Press <b>EDIT</b> (  )	edit the entry
4 Press 	scroll to <b>Voice Name</b>
5 Press <b>RECORD</b> (  )	begin recording
6 Press and release the voice key and say the entry's name (in two seconds)	record the voice name
7 Press and release the voice key and repeat the name	confirm the voice name
8 Press <b>DONE</b> (  )	store the voice name



# Dialing a Phonebook Entry



Use one of the following procedures to call a number (or send a text message to an email address) stored in your phonebook.

## Phonebook List

### Find the Feature



> Phonebook

Press	To
1 keypad key letter	jump to entries that begin with that letter (optional)
2 	scroll to the entry
3 	make the call

## Voice Dial

Do This	To
Press and release the voice key and say the entry's name (in two seconds).	make the call




 
To speed dial a phonebook entry, see page 31. To call an entry with one-touch dial, see page 31.



# Editing a Phonebook Entry

Find the Feature

 > Phonebook




 



Press	To
1  	scroll to the entry
2 <b>VIEW</b> (  )	view entry details
3 <b>EDIT</b> (  )	edit the entry

Edit the entry as described on pages 66-68.

## Deleting a Phonebook Entry

 Find the Feature

 > Phonebook

Press	To
1  	scroll to the entry
2 	open the <b>Phonebook Menu</b>
3  	scroll to <b>Delete</b>
4 <b>SELECT</b> (  )	select <b>Delete</b>
5 <b>YES</b> (  )	confirm the deletion

## Synchronizing with TrueSync Software



You can synchronize phonebook entries between your phone and computer or hand-held device with Starfish TrueSync<sup>®</sup> software, a Motorola



accessory product. See the TrueSync user guide for more information.

**Note:** TrueSync software is designed to synchronize with basic features of many popular Personal Information Management (PIM) software and hardware products.








## Sorting the Phonebook List

You can sort your phonebook list by speed dial number (the standard), name, or voice name.

**Note:** The voice name sort is identical to the name sort, except that entries with voice name tags appear first.

### Find the Feature

 > Phonebook

Press	To
1 	open the Phonebook Menu
2 	scroll to Setup
3 SELECT 	select Setup
4 	scroll to Sort by
5 CHANGE 	select Sort by
6 	scroll to Name, Speed No., or Voice Name
7 SELECT 	select the sort order



# Datebook

The datebook is a calendar that lets you schedule and organize events such as appointments and meetings. You can set the datebook to send a reminder alarm for specific events.

**Note:** You must set the correct time and date on your phone to use the datebook.


To schedule or review datebook events:

## Find the Feature

**MENU** > Datebook


## Week View

The datebook initially displays a calendar for the week. Lines or filled boxes indicate scheduled events.

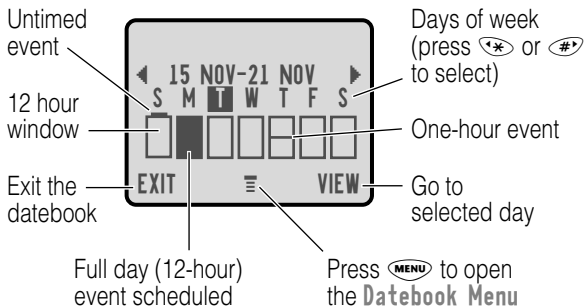


## Day View

Select a day and press **VIEW** (👁) to see the day's events.

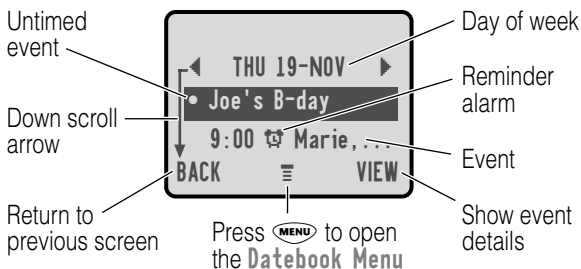

## Event View

Select an event and press **VIEW** (👁) to see event details.

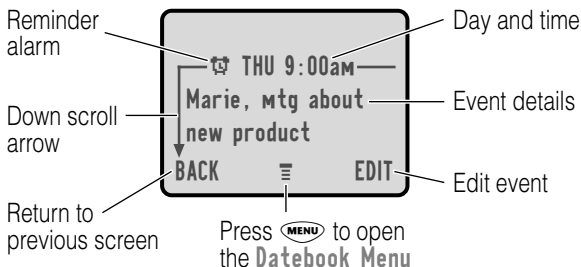






# Adding a Datebook Event

A title is required for a datebook event. All other information is optional.

**Note:** You must create an event to use the reminder alarm.

## Find the Feature


 





 > **Datebook** > *day*  
 > **New**

Press	To
1 <b>CHANGE</b> (  )	select <b>Title</b>
2 keypad keys	enter a title for the event
3 <b>OK</b> (  )	store the event title
4  	scroll to other fields and enter information as necessary  You can set start time, duration, date, repeat interval, and reminder alarm.
5 <b>DONE</b> (  )	store the event




## Changing Event Information

### Find the Feature

 > **Datebook**

Press	To
1  or 	scroll to the day
2 <b>VIEW</b> (  )	display the day view
3  	scroll to the event
4 <b>VIEW</b> (  )	display the event view
5 <b>EDIT</b> (  )	edit the event















Press	To
6 	scroll to the information you want to change
7 <b>CHANGE</b> (  )	edit the information
8 keypad keys	enter new information
9 <b>DONE</b> (  )	store the information

## Copying an Event

### Find the Feature

 > **Datebook**








Press	To
1  or 	scroll to the day
2 <b>VIEW</b> (  )	display the day view
3 	scroll to the event
4 	open the <b>Datebook Menu</b>
5 	scroll to <b>Copy</b>
6 <b>SELECT</b> (  )	copy the event
7 <b>YES</b> (  )	confirm the copy  Your phone assumes you want to change the date, and displays the <b>Date</b> field.
8 keypad keys	enter date information
9  (  )	move to month, day, and year
10 <b>DONE</b> (  )	save the copy of the event
11 	scroll to and edit event information, if necessary



Press	To
12 DONE (👁)	store the information

## Deleting an Event

**Find the Feature**       > Datebook

Press	To
1  or 	scroll to the day
2 VIEW (👁)	display the day view
3  	scroll to the event
4 	open the <b>Datebook Menu</b>
5  	scroll to <b>Delete</b>
6 SELECT (👁)	select <b>Delete</b>
7 YES (👁)	confirm the deletion





# Radio



You can use your phone to listen to FM radio stations when the optional Motorola Original™ FM Stereo Radio Headset accessory is plugged into the phone's accessory connector port.

## Turning the Radio On and Off

Press	To
Radio (ⓘ)	turn the radio on and off



Alternatively, you can use the following procedure:

Press	To
1	open the menu
2	scroll to <b>Radio</b>
3 On (ⓘ) or Off (ⓘ)	turn the radio on or off



**Note:** The **Radio** menu feature and soft key options appear only when the FM Stereo Radio Headset is plugged into the accessory connector port.





## Tuning a Station

Do This	To
Press 	scroll to the next frequency
or	
Press and hold 	scroll to the next available stereo station

## Storing a Preset

Do This	To
Press and hold a number key (  to  )	assign its preset number to the tuned station

## Selecting a Preset

Press	To
a number key (  to  )	tune the station stored at the preset location

## Sending and Receiving Calls With the Radio On

Your phone rings or vibrates as usual to notify you of an incoming call, message, or other event.



Do This	To
Press <b>IGNORE</b> (👁️)	ignore the call
Press <b>ANSWER</b> (👁️)  <b>or</b> Press the button on the FM Stereo Radio Headset microphone	answer the call  <b>Note:</b> You can use the FM Stereo Radio Headset microphone to converse with the other party during a call

To end the call and resume the FM broadcast:

Do This	To
Press <b>END</b>  <b>or</b> Press and hold the button on the FM Stereo Radio Headset microphone	end the call

Turn the radio off before dialing outgoing calls from the phone keypad. You do not have to turn off the radio to dial emergency numbers, or numbers selected from your phonebook or recent call lists.

**Tip:** To dial a recently called number, press **END** or the button on the FM Stereo Radio Headset microphone to go to the dialed calls list. For more information, see page 61.



# Messages—Voicemail



You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone.

## Storing Your Voicemail Number

Storing your voicemail number on your phone makes it easy for you to listen to new voicemail messages. In many cases, your service provider has already done this for you.

### Find the Feature


**MENU** > Messages  
**MENU** > VoiceMail Setup


Press	To
1 keypad keys	enter your voicemail number  <b>Tip:</b> You can store your PIN code with the voicemail number. See page 69.
2 OK (⓪)	store the number

Your service provider additionally may store your voicemail number as phonebook entry number 1, so you can use one-touch dial to listen to your voicemail messages. If necessary, see page 66 to store your voicemail number for one-touch dial access.



## Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voice message waiting) indicator and a **New VoiceMail** notification.


Press	To
CALL (  )	listen to the message

If reminders are turned on, your phone sends a reminder at regular intervals until you close the new message notification, listen to the message, or turn off your phone.

## Listening to a Voicemail Message


**Find the Feature**  > Messages > VoiceMail

The phone calls your voicemail number. If no voicemail number is stored, your phone prompts you to store one.

**Shortcut:** If your voicemail number is also stored as phonebook entry number 1, you can press and hold  to listen to your voicemail message(s).

## Turning Off the Voice Message Waiting Indicator

To clear the  (voice message waiting) indicator:

**Find the Feature**  > Messages  
 > Clear Count



# Messages—Text



Text messages are brief messages that you can send and receive.

Quick notes are pre-written text messages that you can incorporate into a message and send quickly.

Your text message inbox must be set up *before* you can send and receive messages. The number of messages the inbox can hold depends on the length of the messages, and the number of other messages and drafts stored on your phone.

## Setting Up the Text Message Inbox

**Note:** In many cases, your service provider has already set up the text message inbox for you.

### Find the Feature



> Messages



> Text Msg Setup


Press	To
1 <b>CHANGE</b> (⦿)	change the <b>Cleanup</b> setting
2 (⦿) (⦿)	scroll to the number of days you want to keep messages in the inbox, or the number of messages you want to keep
3 <b>SELECT</b> (⦿)	select the cleanup setting

**Press****To****4 DONE** (👁)

save the inbox settings

## Receiving a Text Message

**Note:** Your text message inbox must be set up before you can receive text messages. See page 84.

When you receive a text message, your phone displays the  (message waiting) indicator and a **New Inbox Message** notification, and gives an alert.

**Press****To****READ** (👁)

open the message

If reminders are turned on, your phone sends a reminder at regular intervals until you close the new message notification, read the message, or turn off your phone.

When your phone displays **Memory is Full!**, you must delete some existing messages to receive new messages.

## Reading, Locking, or Deleting a Text Message










Messages in the text message inbox are sorted from newest to oldest. The oldest messages are deleted automatically as specified by the inbox cleanup setting (see page 84). If you want to save a message, you should lock it to prevent it from being deleted during cleanup.

**Find the Feature**

> **Messages**  
> **Text Msgs Inbox**





Press	To
1 	scroll to the message
<p>The following indicators show message status:</p> <p> = unread</p> <p> = unread and urgent</p> <p> = read</p> <p> = read and locked</p>	
2 <b>READ</b> (  )	open the message
3 <b>SAVE</b> (  )	close the message
or	
<b>DELETE</b> (  )	delete the message
or	
	open the <b>Text Msg Menu</b> to perform other procedures as described in the following list

The **Text Msg Menu** includes the following options:

Option	Description
<b>Create Message</b>	Open a new text message.
<b>Call Back</b>	Call the number in the message header or embedded in the message.
<b>Go To</b>	Launch the micro-browser and go to a Web address (URL) embedded in the message.





Option	Description
Reply	Open a new text message, with the sender's <b>Reply To</b> number or email address in the <b>To</b> field.
Forward	Open a copy of the text message, with an empty <b>To</b> field.
Lock/Unlock	Lock or unlock the message.
Store Number	Create a phonebook entry, with the embedded number in the <b>No.</b> field.
Delete	Delete the message.
Delete All	Delete all inbox messages.
Store Address	Create a phonebook entry, with the embedded email address in the <b>Email</b> field.
Setup	Open the text message inbox setup menu.

## ***Sending a Text Message***

You can send a text message to one or more recipients. You can manually enter each recipient's phone number or email address, or select numbers/addresses from the phonebook or recent call lists.

**Note:** When you manually enter numbers and/or email addresses, you must insert a space between each entry.



Press **1** one time, wait for the space to appear, then enter the next number or email address.

## Find the Feature

**MENU** > Messages  
> Create Message

Press	To
<b>1</b> <b>CHANGE</b> (⦿)	select <b>To</b>
<b>2</b> keypad keys	enter one or more phone numbers and/or email addresses
	<b>Tip:</b> Press <b>1</b> to insert a space between each number/address that you enter manually.
<b>or</b>	
<b>BROWSE</b> (⦿)	select numbers/addresses from the phonebook or recent call lists
<b>3</b> <b>OK</b> (⦿)	store the numbers/addresses
<b>4</b> <b>CHANGE</b> (⦿)	select <b>Msg</b>
<b>5</b> keypad keys	enter the message
	<b>Note:</b> Message length is limited. As you near the limit, a display counter shows how many characters are left.
<b>or</b>	
<b>BROWSE</b> (⦿)	select and insert a quick note message (see page 89)
<b>6</b> <b>OK</b> (⦿)	store the message



Press	To
<b>7</b> CHANGE (⦿)	select <b>Priority</b>
<b>8</b> ⦿	scroll to the priority you want
<b>9</b> SELECT (⦿)	set the priority
<b>10</b> CHANGE (⦿)	select <b>Call</b>
<b>11</b> keypad keys	enter a number for the recipient to call back
<b>12</b> OK (⦿)	store the number
<b>13</b> DONE (⦿)	finish the message
<b>14</b> YES (⦿)	send the message
or	
<b>NO</b> (⦿)	cancel the message or save it in the drafts folder

## ***Sending a Quick Note Text Message***

Quick notes are pre-written text messages that you can incorporate into a message and send quickly (for example, **Meet me at ...**). You can also create new quick notes.

### **Find the Feature**

 > **Messages**  
> **Quick Notes**

Press	To
<b>1</b> ⦿	scroll to the quick note

**Press****To****2 READ** (👁)

read the quick note

**or**open the **Quick Note Menu** to perform other procedures as described in the following list

The **Quick Note Menu** includes the following options:

Option	Description
<b>New</b>	Create a new quick note.
<b>Edit</b>	Edit the quick note.
<b>Delete</b>	Delete the quick note.
<b>Send</b>	Open a new message with the quick note in the <b>Msg</b> field.

## Viewing the Status of Sent Text Messages

Messages that you send are stored in the outbox.

**Find the Feature**> **Messages** > **Outbox**


Messages in the outbox are sorted from newest to oldest. The following indicators show message status:


» = sending in progress      📧 = sent

✕ = sending failed

# Ring Styles


Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*. You can select one of five different ring styles:

 = loud ring

 = soft ring

 = vibrate

 = vibrate and ring

 = silent



The ring style indicator in the display shows the current ring style (see page 23).

Each ring style contains settings for specific event alerts, and ringer and keypad volume.

## Selecting a Ring Style

**Find the Feature**

 > Settings  
> Ring Styles > Style

Press	To
1 	scroll to the ring style
2 SELECT 	select the ring style

## Customizing a Ring Style

### Change Style Settings

You can change the alerts that notify you of the following events: incoming calls, text messages, voicemail









messages, data calls, fax calls, alarms, and reminders. Any changes you make are saved to the current ring style.

### Find the Feature

 > **Settings**  
> **Ring Styles**  
> **Style Detail**

**Note:** *Style* represents the current ring style.








Press	To
1  	scroll to the event
2 <b>CHANGE</b> 	select the event
3  	scroll to the alert you want
4 <b>SELECT</b> 	select the alert

## Set Ringer or Keypad Volume

### Find the Feature

 > **Settings**  
> **Ring Styles**  
> **Style Detail**

**Note:** *Style* represents the current ring style.

Press	To
1  	scroll to <b>Ring Volume</b> or <b>Key Volume</b>
2  * or # 	scroll to the desired volume
3 <b>OK</b> 	confirm the new volume








# Creating Alert Tones

You can create and store up to 32 custom alert tones on your phone. The tones appear in the list of available alerts.

## Create a Tone

### Find the Feature

 > Settings  
> Ring Styles  
> My Tones

Press	To
1 	scroll to [New Tone]
2 SELECT (  )	select [New Tone]
3 CHANGE (  )	select Notes
4 keypad keys	enter notes (see page 93)
5 OK (  )	store the notes
6 CHANGE (  )	select Name
7 keypad keys	enter a name for the tone
8 OK (  )	store the name
9 DONE (  )	store the tone

## Enter Notes

Use the keypad keys to enter each note. Press a key multiple times to cycle through its notes or options (pitch, octave, or length). The default setting for a new tone is a quarter note in octave two.







Key	Display	Description
1 <small>Oct</small>	1	set octave one
	2	set octave two
	3	set octave three
2 <small>ABC</small>	A	note A
	B	note B
	C	note C
3 <small>DEF</small>	D	note D
	E	note E
	F	note F
4 <small>GHI</small>	G	note G
	R	rest
7 <small>PRS</small>	#	sharp
	b	flat
0	q	quarter note or rest
	h	half note or rest
	w	whole note or rest

Enter a note as follows:

Task	Action
Change the octave	Set the new octave (1, 2, or 3) <i>before</i> selecting the note. The octave applies to all following notes until you change it again.
Select the note (required)	Press a keypad key.



Task	Action
Change a note to a sharp or flat	<p>Enter a sharp or flat (<b>#</b> or <b>b</b>) <i>after</i> selecting the note.</p> <p>Some sharps and flats are played as standard notes. For example, <b>B#</b> is the same as <b>C</b>. Press  to scroll to valid notes when entering a new note.</p>
Change a note's length	<p>Set the new length (<b>q</b>, <b>h</b>, or <b>w</b>) <i>after</i> selecting the note. The length applies to all following notes until you change it again.</p>
Add a rest	<p>Enter one or more rests (<b>R</b> characters) as needed in the tone sequence. Set the length of the rest by entering a <b>q</b>, <b>h</b>, or <b>w</b> character <i>after</i> the rest, just as you would for a note.</p>
Listen to a new tone as you compose it	<p>Press  to enter the <b>Compose Menu</b>, and select <b>Play All</b> to play the notes you have entered.</p>



## Example

Press the following keys to play this sequence of notes and rests in octave three: **C** (quarter note), **E flat** (quarter note), **half rest**, and **G** (whole note):



Press	To	Display
1	set octave three	3
2	enter a quarter note <b>C</b>	C
3	enter a quarter note <b>E flat</b>	Eb
4	enter a <b>half rest</b>	Rh
5	enter a whole note <b>G</b>	Gw

## Play a Tone

### Find the Feature

> Settings  
> Ring Styles  
> My Tones







Press	To
1	scroll to the tone
2	open the <b>My Tones Menu</b>
3	scroll to <b>Play</b>
4 <b>SELECT</b> ()	select <b>Play</b>
5 <b>PLAY</b> ()	play the tone again
or	
<b>CANCEL</b> ()	return to my tones list

## Edit a Tone

You cannot edit the predefined alert tones included with your phone. To edit a custom alert tone:

### Find the Feature

 > **Settings**  
> **Ring Styles**  
> **My Tones**

Press	To
1 	scroll to the tone
2 <b>EDIT</b> (  )	open the tone details
3 	scroll to the item you want to edit ( <b>Name</b> or <b>Notes</b> )
4 <b>CHANGE</b> (  )	select the item
5 keypad keys	enter new text or notes
6 <b>OK</b> (  )	store the new text or notes
7 <b>DONE</b> (  )	save your changes








## Delete a Tone

You cannot delete the predefined alert tones included with your phone. To delete a custom alert tone:

### Find the Feature

 > **Settings**  
> **Ring Styles**  
> **My Tones**

Press	To
1 	scroll to the tone
2 	open the <b>My Tones</b> Menu

Press	To
3 	scroll to <b>Delete</b>
4 <b>SELECT</b> (  )	select <b>Delete</b>
5 <b>YES</b> (  )	confirm the deletion



## Setting Reminders

A reminder is an alert that rings or vibrates at regular intervals to notify you about a voicemail or text message that you have received.

### Find the Feature

 > **Settings**  
 > **Ring Styles**  
 > **Style Detail**  
 > **Reminders**

**Note:** *Style* represents the current ring style.

Press	To
1 	scroll to <b>Beep</b> or <b>Vibrate</b> to set the reminder alert type, or <b>Off</b> to turn off all reminders
2 <b>SELECT</b> (  )	select the reminder alert

# Shortcuts

Your phone includes several standard shortcuts. You can create additional shortcuts to frequently used menu items.

## Standard Shortcuts

The following shortcuts are pre-programmed in your phone. You cannot edit or delete these shortcuts.

Do This	To
Press <b>MENU</b> , then press and hold <b>MENU</b> (within two seconds)	zoom in/out on your phone display
Press <b>MENU</b> <b>* *</b>	lock/unlock your keypad
Press <b>MENU</b> <b># *</b>	see your phone number
Press <b>SND</b>	go to the dialed calls list
Press <b>END</b>	exit the menu system











## Creating a Shortcut

You can create a keypad shortcut *plus* an optional voice shortcut to a menu item. A voice shortcut takes you directly to the menu item when you say the shortcut name.

**Tip:** Make your recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.


Do This	To
1 Press <b>MENU</b>	enter the menu system

Do This	To
2 Press 	scroll to the menu item
3 Press and hold 	open the shortcut editor
4 Press <b>YES</b> (  )	view shortcut options
5 Press <b>CHANGE</b> (  )	change the keypad shortcut number
or	
Press <b>DONE</b> (  )	select the default keypad shortcut number
or	
Press 	scroll to <b>Voice</b> to assign a voice shortcut
6 Press <b>RECORD</b> (  )	begin recording
7 Press and release the voice key and say the shortcut's name (in two seconds)	record the shortcut name
8 Press and release the voice key and repeat the name	confirm the shortcut name
9 Press <b>DONE</b> (  )	store the shortcut name



# Using Shortcuts

## Use a Keypad Shortcut

Press	To
1 	open the menu
2 <i>the keypad shortcut number</i>	go to the menu item or perform the menu action

## Select a Shortcut From the List


### Find the Feature



> **Shortcuts**

> *the shortcut you want*

## Use a Voice Shortcut

Do This	To
1 Press 	open the menu
2 Press and release the voice key and say the shortcut's name (in two seconds)	go to the menu item or perform the menu action



# Voice Notes

---

You can use the voice note feature to record personal messages and phone calls on your phone.

## Recording a Voice Note

Use this procedure to record a voice note from the idle display, or to record a phone call in progress. Your phone plays an alert tone to notify the other party that the call is being recorded.

**Note:** Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.

**Tip:** Make your recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.




Do This	Result
1 Press and hold the voice key for the duration of the recording.	The phone sounds an alert tone and begins recording.
2 Speak your voice note.	The phone records the voice note.
3 Release the voice key to stop recording.	The phone displays the voice note number and total recording time.



# Viewing the Voice Notes List

## Find the Feature

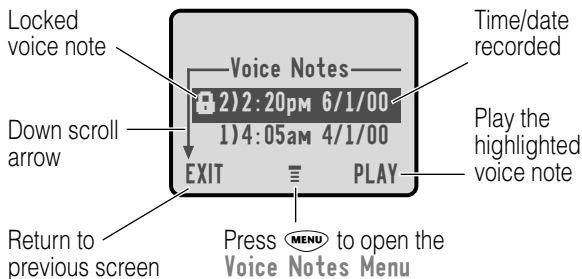

**MENU** > Voice Notes



# Playing a Voice Note

## Find the Feature

 > Voice Notes


Press	To
1 	scroll to the voice note
2 <b>PLAY</b> 	play the voice note

When you connect an optional Motorola Original™ headset or FM Stereo Radio Headset accessory to your phone, playback is automatically routed to the headset.

**Tip:** You can play a voice note while taking a call. It will not be transmitted to the other party.

## Playback Screen

The playback screen is displayed as the voice note plays.

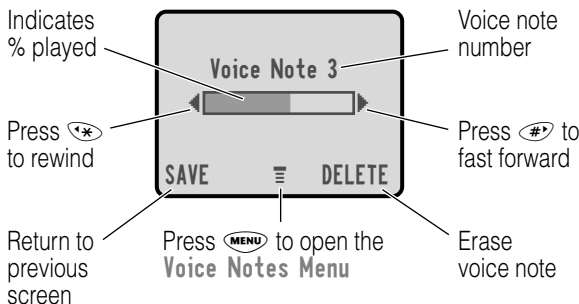

## Voice Note Controls

Stop playback and go to **Voice Notes Menu**.

Raise or lower playback volume of voice note.

Stop playback and return to voice notes list.

Stop playback and scroll up/down to next voice note.

Rewind three seconds, resume playing.

Press and hold to rewind to the beginning.

When playback is complete, press to restart.


If voice note is unlocked, stop playback and display **Delete Voice Note?**

If voice note is locked, stop playback and unlock voice note.

Press any number to alternately stop and start playback.

Fast forward three seconds, resume playing.

Press and hold to fast forward to end.

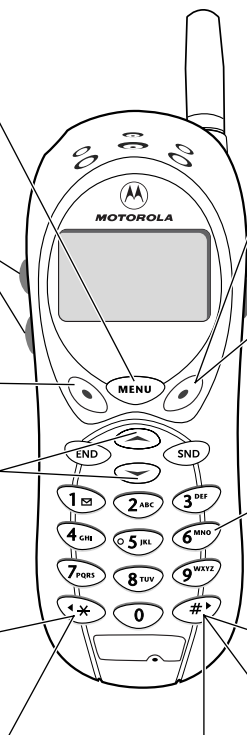







# Locking and Unlocking a Voice Note





Lock a voice note to prevent it from being deleted. You must unlock a voice note to delete it.

## Find the Feature

 > Voice Notes

Press	To
1  	scroll to the voice note
2 	open the <b>Voice Notes Menu</b>
3  	scroll to <b>Lock</b> or <b>Unlock</b>
4 <b>SELECT</b> 	lock or unlock the voice note

To lock or unlock a voice note during playback:

Press	To
1 	open the <b>Voice Notes Menu</b>
2  	scroll to <b>Lock</b> or <b>Unlock</b>
3 <b>SELECT</b> 	lock or unlock the voice note









Playback stops when you lock or unlock a voice note. Press any number key to resume playback.



# Deleting a Voice Note

## Find the Feature

 > Voice Notes

Press	To
1  	scroll to the voice note you want to delete
2 	open the <b>Voice Notes Menu</b>
3  	scroll to <b>Delete</b> or <b>Delete All</b>
4 <b>SELECT</b> (  )	select the highlighted option
5 <b>YES</b> (  )	confirm the deletion
or	
<b>NO</b> (  )	cancel deletion

## Notes:

- You cannot delete a locked voice note.
- You cannot recover a delete voice note.



# Micro-Browser



The micro-browser lets you access Web pages and Web-based applications on your phone. Contact your service provider to set up access, if necessary.



## Starting a Micro-Browser Session

### Find the Feature

**MENU** > Browser









Press	To
1	scroll to a bookmark, service, or application
2 <b>SELECT</b>	select the item

**Shortcut:** If you open a text message with a Web address (URL) embedded in it, you can press **MENU** > **Go To** to launch the micro-browser and go directly to the URL.

If you are unable to establish a network connection with the micro-browser, contact your service provider.



# Interacting With Web Pages

Press	To
 	scroll through text, or highlight a selectable item
<b>SELECT</b> (  )	select the highlighted item
	call the highlighted phone number from the micro-browser
keypad keys, followed by <b>OK</b> (  )	enter information  Press  to delete one letter at a time if you make a mistake.
	go back to the previous page
	open the <b>Browser Menu</b>




# Calculator



You can use your phone as a calculator and currency converter.

## Calculating Numbers

Press	To
1 number keys	enter a number
2  or	highlight a calculator function
3 <b>SELECT</b>	perform the function

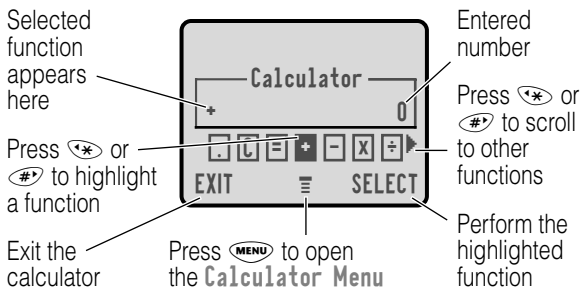



The calculator can perform the following functions:

Function	Description
.	Insert a decimal point
C	Clear the calculation
CE	Clear entry (replaces C when you enter subsequent values in a calculation)
=	Calculate the result
+	Add
-	Subtract
x	Multiply
÷	Divide
%	Divide the displayed value by 100
±	Change the entry's sign (positive/negative)
\$	Calculate the exchange rate
MS	Store the value in memory (overwrites current stored value)
MC	Clear the value stored in memory
MR	Replace the displayed value with the value stored in memory







# Converting Currency

The currency converter works just like the calculator, but uses the \$ (currency) function:

## Find the Feature

 > **Calculator**  
 > **Exchange Rate**


Press	To
1 number keys	enter the exchange rate
2 <b>OK</b> (  )	store the exchange rate
3 number keys	enter the amount to convert (amount to multiply by the exchange rate)
4  or 	highlight the \$ function
5 <b>SELECT</b> (  )	perform the conversion



# Games

You can play games on your phone between phone calls. An incoming call, message, alarm, or alert automatically ends the game.





## Playing a Game

### Find the Feature

 > Games

Press	To
1 	scroll to a game
2 <b>SELECT</b> 	start the game

When the game is over:

Press	To
<b>NEW</b>  or <b>YES</b> 	start another session of the same game
<b>BACK</b>  or <b>NO</b> 	end the game session



# Game Options

Press  to select the following options during a game.

**Note:** Some options may not be available for all games.

Option	Description
Game Sounds	Switch game sounds on/off.
New Game	Start a new game session.
Help	Review the goal of the game.

## Blackjack

In this classic card game, you play against the dealer to see who can get closer to 21 points without going over.

### Rules of the Game

- The first card is dealt to the dealer. The dealer's cards are shown at the top of the display, and your cards are shown at the bottom.
- Face cards count as 10 points. Number cards count as the points shown on their face.
- An ace counts as 11 points, unless that would put you over 21 points. Otherwise, an ace is counted as 1 point. An ace that is originally counted as 11 may later be counted as 1 if it will bring your total under or equal to 21 points.
- An initial deal of an ace and a card with a face value of 10 points counts as exactly 21 points or Blackjack.



- Blackjack automatically wins against any other hand that totals 21 points.
- If you score more than 21 points, you go “bust” or lose.
- If you get five cards without going bust, you win.
- If you and the dealer have the same score, the dealer wins.
- You can ask for a “hit” or another card as long as you do not go bust.
- As long as the dealer’s total is less than 17 points, the dealer must continue to take a hit.



## How to Play

When the game begins, you are dealt two cards.

Press	To
STAY (👁️)	see the results of the hand
HIT ME (🎯)	request another card

# Mindblaster

Guess a secret four-symbol code. You play by entering symbols into four spaces and then submitting a guess.

## Rules of the Game

- Your score is the number of guesses it takes to reveal the secret code.
- When you submit a guess, you receive clues that indicate how many symbols you have identified correctly, and how many are in the correct position. The position of the clues does *not* correspond to the location of the symbols.

■ = correct symbol in correct position









□ = correct symbol in wrong position

- You can see a history of your last 10 guesses.
- Once you enter a symbol into a blank space, you can change the symbol but you cannot make the space blank again.
- When you correctly guess the four-symbol code, the display shows your score and the level of your next game.
- After you win one game, you progress from level 1 to level 2. After you win two more games, you progress from level 2 to level 3.
- When you exit the game or turn off the phone, you begin again at level 1.



## How to Play

When the game begins, you see four blank spaces.

Do This	To
Press  or 	move from space to space
Press  	place a symbol in a space
Press <b>GUESS</b> (  )	submit a guess (when all four spaces contain symbols)
Select  and then press  	scroll through a history of your last 10 guesses



## Paddleball

Move your paddle to strike a bouncing ball. The paddle gets smaller and the ball goes faster as your score increases.

### Rules of the Game

- Your score is the number of times your paddle hits the ball.
- The game is over when the paddle misses the ball.

## How to Play

Press	To
 	move your paddle to hit the bouncing ball







# Adjusting Your Settings

## Reordering Menu Items



You can reorder the items in your phone's main menu.

### Find the Feature

**MENU** > Settings  
> Other Settings  
> Personalize  
> Main Menu

Press	To
1 	scroll to a menu item
2 <b>GRAB</b> (  )	grab the menu item
3 	move the item to a new location in the menu
4 <b>INSERT</b> (  )	insert the menu item

## Customizing a Soft Key Function





You can relabel the soft keys ( and ) to access different menu items from the idle display.

### Find the Feature

**MENU** > Settings  
> Other Settings  
> Personalize > Keys





Press	To
1 	scroll to <b>Left</b> or <b>Right</b>
2 <b>CHANGE</b> (  )	select the key
3 	scroll to the new key function
4 <b>CHANGE</b> (  )	confirm the new function

## Hands-Free Use



You can purchase an optional Motorola Original™ hands-free car kit or headset for your phone. These accessories provide alternative ways for you to use your phone without using your hands.

**Note:** The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.






## Automatic Answer

You can set your phone to automatically answer calls after two rings (four seconds) when connected to a car kit or headset.

### Find the Feature

**MENU** > **Settings**  
> **Other Settings**

Press	To
1 	scroll to <b>Car Settings</b> or <b>Headset</b>
2 <b>SELECT</b> (  )	select the feature
3 	scroll to <b>Auto Answer</b>

Press	To
4 <b>CHANGE</b> (⦿)	select <b>Auto Answer</b>
5 (⬆) (⬇)	scroll to <b>On</b> or <b>Off</b>
6 <b>SELECT</b> (⦿)	confirm the setting

## Automatic Hands-Free

You can set your phone to automatically route calls to a car kit when it detects a connection.

### Find the Feature

(MENU) > **Settings**  
 > **Other Settings**  
 > **Car Settings**  
 > **Auto Handsfree**

Press	To
1 (⬆) (⬇)	scroll to <b>On</b> or <b>Off</b>
2 <b>SELECT</b> (⦿)	confirm the setting



## Power-Off Delay



When your phone is connected to a car kit, you can set it to stay on for a period of time after you switch off the ignition. This prevents the phone from draining your vehicle battery, but leaves the phone on long enough that you do not have to re-enter your unlock code when making short stops.

**Note:** This feature may not work with all car ignition switches.

**Caution:** If you select **Continuous**, the phone does not power off when you turn off the ignition. Be careful not to drain your vehicle battery if you select this option.

### Find the Feature

-  > Settings
- > Other Settings
- > Car Settings
- > Power-Off Delay

Press	To
1 	scroll to the time delay
2 SELECT 	confirm your selection



## Charger Time

When your phone is connected to a car kit, you can set it to charge itself for a specified time period after you switch off the ignition. This helps ensure that the phone battery gets fully charged while the vehicle is parked.

**Note:** This feature may not work with all car ignition switches.

### Find the Feature

-  > Settings
- > Other Settings
- > Car Settings
- > Charger Time

Press	To
1 	scroll to the charge time
2 SELECT 	confirm your selection



# Data and Fax Calls

---



A Motorola Original™ data kit lets you transfer data between your phone and a computer or other external device. You can:

- synchronize data between your phone and an external device with Starfish TrueSync® software, a Motorola accessory product. See the TrueSync user guide for more information.

**Note:** TrueSync software is designed to synchronize with basic features of many popular Personal Information Management (PIM) software and hardware products.

- use your phone as a modem to connect to the Internet.
- use your phone to send and receive data and fax calls on your computer or hand-held device.

## Connecting Your Phone to an External Device

Connect your phone to a computer or hand-held device using a serial cable or a USB cable.

**Note:** Not all devices are compatible with serial cable or USB cable connections. Check your external device for specifications.



## Set Up a Cable Connection

Attach a serial cable or Motorola Original USB cable to the phone and external device as follows.


**Note:** Check your computer or hand-held device to determine the type of cable you need.

### Attaching a Serial Cable


Use the interchangeable head on the Motorola Multi-Connect Serial Cable to connect a computer, Palm III device, or Palm V device to your phone.

#### Do This

- 1 Plug the serial cable into the detachable head. Make sure that the Motorola logo on the detachable head and the metal shielding on the serial cable plug are both facing you.

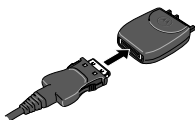

- 2 With the Motorola logo and the phone both facing you, plug the detachable head into the phone's accessory connector port.

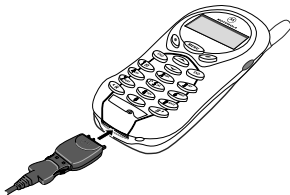

**Do This**

- 3 Plug the other end of the cable into the serial interface connection on the external device and tighten the screws.
- 

**Attaching a USB Cable****Do This**

- 4 Plug the end of the cable with the Motorola logo into the phone's accessory connector port. Make sure that the logo and the phone are both facing you.



- 5 Plug the other end—the USB connection—into the USB port on the external device.
- 

**Install the Software**

Install the software from the CD-ROM that comes with your Motorola Original data kit. See the data kit's user guide for more information.



## ***Sending a Data or Fax Call***

Use this procedure to send data or a fax from a connected device, and to synchronize phonebook and datebook information between your phone, computer, and/or hand-held device.

Connect your phone to the device as described on page 122 and do the following:

<b>Do This</b>	<b>To</b>
<b>1</b> Check the phone	make sure that the phone is connected and powered on
<b>2</b> Open the application on your computer	place the call through the application (such as dial-up-networking or fax)  <b>Note:</b> You cannot dial data or fax numbers through your phone's keypad. You must dial them through your computer.
<b>3</b> End the call from the connected device	close the call and connection when the transfer is complete






# Receiving a Data or Fax Call

Use this procedure to transfer data or a fax to your computer or hand-held device.

## Set Up Your Phone

### Find the Feature

 > Settings  
> Connection  
> Incoming Call

Do This	To
1 Press <b>CHANGE</b> (  )	select <b>Next Call</b>
2 Press 	scroll to <b>Data In Only</b> or <b>Fax In Only</b>
3 Press <b>SELECT</b> (  )	set the call format
4 Connect your phone to the device	enable the data or fax transfer

**Note:** You cannot answer incoming voice calls when your phone is in data or fax mode. Any voice calls you receive are treated as unanswered calls. To return a voice call, reset your phone to voice mode as described on page 127.

## Transfer the Data or Fax

Your phone notifies you when the data or fax call arrives, and transfers the call to the connected device. Use the application running on the device to answer the call.





## End the Data/Fax Connection

When the data or fax transfer is complete:




Do This	To
End the call from the connected device	close the connection

## Reset Normal Voice Operation

After making a data or fax call, you must reset your phone to resume normal voice operations.

### Find the Feature

 > **Settings**  
> **Connection**  
> **Incoming Call**

Do This	To
1 Press <b>CHANGE</b> (  )	select <b>Next Call</b>
2 Press 	scroll to <b>Normal</b>
3 Press <b>SELECT</b> (  )	reset your phone

Your phone also reverts to normal voice operations when you turn it off and then turn it back on.



# Security

---

## Assigning a New Code or Password

Your phone's unlock code is originally set to 1234, and the security code is originally set to 000000. Your service provider may reset these numbers before you receive your phone.

If your service provider has *not* reset these numbers, we recommend that you change them to prevent other users from accessing your personal information. The unlock code must contain four digits, and the security code must contain six digits.

### Notes:






- Your service provider may retain your phone's security code for customer service purposes. In this case, you will not be able to use phone features that require you to enter the security code.
- If the unlock code is the only code you can change, the **New Passwords** menu is not available. In this case, change the unlock code by selecting: **MENU** > **Settings** > **Security** > **Phone Lock** > **Unlock Code**.

To change a code or password:

### Find the Feature

**MENU** > **Settings** > **Security**  
> **New Passwords**





Press	To
1 	scroll to the code or password
2 <b>CHANGE</b> (  )	select the code or password
3 keypad keys	enter your old code
4 <b>OK</b> (  )	submit your old code
5 keypad keys	enter the new code
6 <b>OK</b> (  )	assign the new code
7 keypad keys	re-enter the new code
8 <b>OK</b> (  )	confirm the new code

## ***If You Forget a Code or Password***

If you forget your security code, contact your service provider.

If you forget your unlock code, try entering 1234 or the last four digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

Press	To
1 	go to the unlock code bypass screen
2 keypad keys	enter your security code
3 <b>OK</b> (  )	submit your security code



# Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer.*

You can make emergency calls on your phone even when it is locked. For more information, see page 30.

## Lock Your Phone Manually

### Find the Feature

 > Settings > Security  
> Phone Lock  
> Lock Now

Press	To
1 keypad keys	enter your unlock code
2 OK (ⓘ)	lock the phone

## Set Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off.

### Find the Feature

 > Settings > Security  
> Phone Lock  
> Automatic Lock > On

Press	To
1 keypad keys	enter your unlock code
2 OK (ⓘ)	activate automatic lock





## Unlock Your Phone

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (ⓘ)	unlock your phone

## Locking and Unlocking Your Keypad

You can lock your phone keypad to prevent accidental keypresses (for example, when carrying your phone in a purse or pocket).

Press	To
 	lock or unlock your keypad

**Note:** Incoming calls and messages unlock the keypad.

## Restricting Calls

You can stop all incoming and/or outgoing calls, or you can restrict outgoing calls to the numbers stored in your phonebook.









### Notes:

- You can make emergency calls when outgoing calls are restricted.
- Your phone still receives incoming text messages when incoming calls are restricted.



## Find the Feature

 > Settings > Security  
> Restrict Calls

Press	To
1 keypad keys	enter your unlock code
2 OK (  )	open the restrict calls menu
3  	scroll to <b>Outgoing Calls</b> or <b>Incoming Calls</b>
4 CHANGE (  )	select the option
5 CHANGE (  )	change the <b>Allow</b> setting
6  	scroll to <b>All</b> , <b>None</b> , or <b>Phonebook</b> (for outgoing calls)
7 SELECT (  )	select the allowed calls






**Tip:** The phonebook is not locked when you restrict outgoing calls to numbers stored in the phonebook. To prevent a user from adding (and then calling) a new phonebook entry, you may want to lock the phonebook. See the “Lock Application” item on page 55.



# Troubleshooting

Check these questions first if you have problems with your phone. If you need additional help, contact the Motorola Customer Call Center at 1-800-331-6456 (United States) or 1-800-461-4575 (Canada).




Question	Answer
<b>Is your phone set up correctly?</b>	Press <b>MENU</b> <b>#&gt;</b> . If you do not see your phone number, contact your service provider.
<b>Is your battery charged? Do you see  in the display?</b>	The battery level indicator should have at least one segment showing (  ). If it does not, recharge your battery. See page 19.
<b>Does the handset have a signal? Do you see  in the display?</b>	The signal strength indicator should have at least one segment showing (  ). If it does not, move to an area with a stronger signal to use your phone.
<b>Is the earpiece volume too low?</b>	While on a call, press the upper volume key on the side of your phone.
<b>Is the other party unable to hear you?</b>	Press <b>UNMUTE</b> (  ) if necessary to unmute the phone.  Also, make sure that your phone's microphone is not blocked by its carrying case or a sticker.




 
Question	Answer
<b>Has the phone been damaged, dropped, or gotten wet?</b>	Dropping your phone, getting it wet, or using a non-Motorola battery or battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories.
<b>Was a non-Motorola battery or battery charger used?</b>	

The following refer to specific problems:

Problem	Solution
<b>My phone was stolen. To whom should I report this?</b>	Report a stolen phone to the police and to your service provider (the company that sends you your monthly wireless service bill).
<b>I forgot my password.</b>	See page 129.
<b>I pressed the power key, but nothing happened.</b>	Be sure to press and hold  (the power key) until the display appears and you hear an alert. This could take several seconds. If nothing happens, check that a charged battery is installed. See page 18.






<b>Problem</b>	<b>Solution</b>
<b>The display says: Enter Unlock Code. How do I unlock my phone?</b>	Enter the factory-preset unlock code (1234), or the last four digits of your phone number. If this fails, call your service provider (the company that sends you your monthly wireless service bill).
<b>My phone asks for an unlock code when I try to open a feature.</b>	The application you want is locked. If you do not know the unlock code, see page 129.
<b>My phone does not ring.</b>	<p>If you see  or  in the display, then the ringer is turned off. See page 91.</p> <p>Also, the ringer may be set to <b>Silent</b> even though your phone is set to an audible ring style. See page 91.</p>
<b>My phone rings even though I selected the Silent (or Vibrate) ring style.</b>	The ringer may be set to play a tone even though your phone is set to a silent ring style. See page 91.






Problem	Solution
<b>I tried to place a call and heard an alternating high/low tone.</b>	Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until the display says <b>Ready</b> before making a call.
<b>I cannot send/receive calls.</b>	<p>Make sure that you have a phone signal (see the “Signal Strength Indicator” item on page 24). Avoid electrical or radio interference, and obstructions such as bridges, parking garages, or tall buildings.</p> <p>Your phone also may have the <b>Restrict Calls</b> feature turned on. If you know the unlock code, you can change this setting in the security menu (<b>MENU</b> &gt; <b>Settings</b> &gt; <b>Security</b>).</p>
<b>My phone has poor reception and drops calls.</b>	<p>Make sure that your antenna is not bent or damaged.</p> <p>Also, make sure you have a phone signal (see the “Signal Strength Indicator” item on page 24). Stay clear of any obstructions such as bridges, parking garages, or tall buildings.</p>



Problem	Solution
<b>I cannot hear others on my phone.</b>	While on a call, press the upper volume key. The display should show the volume increasing.  Also, make sure that your phone's earpiece is not blocked by its carrying case.
<b>I cannot open my message inbox.</b>	Before you can use text messages, you must set up the message inbox. See page 84.
<b>How do I see the calls I sent or received?</b>	To see the most recent calls you dialed or received:  <div style="text-align: center;">  &gt; Recent Calls            &gt; Received Calls  <b>or</b>            Dialed Calls         </div>



Problem	Solution
<p><b>My phone will not send voicemail commands, passwords, or other codes.</b></p>	<p>Your phone sends commands and passwords as DTMF tones. You can set your phone's DTMF tones to be <b>Long</b>, <b>Short</b>, or <b>Off</b>. If you have trouble sending numbers, try changing the DTMF setting.</p> <ol style="list-style-type: none"> <li>From the idle display, press:                     <ul style="list-style-type: none"> <li> <b>&gt; Settings</b></li> <li><b>&gt; Other Settings</b></li> <li><b>&gt; Initial Setup &gt; DTMF</b></li> </ul> </li> <li>Press  to scroll to <b>Long</b> or <b>Short</b> (some analog networks may not recognize short tones).</li> <li>Press <b>SELECT</b> () to select it.</li> </ol>
<p><b>My phone's display is too dark.</b></p>	<p>Use the <b>Contrast</b> feature to change the level of contrast in your display. See page 57.</p> <p>You can also use the <b>Backlight</b> feature to change the length of time that the display backlight stays on. See page 57.</p>



<b>Problem</b>	<b>Solution</b>
<b>My battery didn't last as long as I expected. What can I do to extend battery life</b>	Your battery's performance is affected by charge time, feature use, temperature changes, backlight use, and other factors. For tips on extending your battery life, see page 25.
<b>I am unable to record a voice note, voice name, or voice shortcut.</b>	Try moving to a quieter location to make your voice recording. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.
<b>I plugged the data cable into my phone but my phone did not beep. How do I know if the data cable is ready to go?</b>	<p>The beep indicates that you are set up correctly. If you did not hear a beep, make sure that both ends of the data cable are connected—the smaller end to your phone and the larger end to your computer.</p> <p>Also, your computer may have deactivated the port to save power. Try opening an application that uses the port, like a fax or dial-up application, to automatically activate the port.</p>



Problem	Solution
<b>My phone beeped when I attached the data cable, but my data and fax applications don't work.</b>	<p>You must be in an area with digital coverage. Check your phone's display for the digital signal indicator (D).</p> <p>Some wireless networks may not support data or fax transmission. If you see the digital indicator, but you are roaming on an unfamiliar network, this may be the case.</p> <p>Also, remember that data and fax transmission usually requires a subscription. Call your service provider for more information.</p>
<b>When sending data with the data cable, why does the computer show a connection rate of 19200 Kbps?</b>	<p>19200 Kbps is the data transfer rate of the connection between your computer and the phone. The rate of the connection between your phone and the network is displayed on your phone, and will be either 14400 or 9600 Kbps.</p>
<b>I can't end my data call by closing the application on my computer. What can I do?</b>	<p>Try pressing <b>END</b> on your phone. Or try disconnecting the cable or turning off the phone. If possible, always close the connection through your computer, as these alternative methods may disrupt the application on your computer.</p>



Problem	Solution
<b>I launched the micro-browser but the display says: Service Not Available.</b>	You may be in an area without service. If you have wireless service, look in the display for the digital signal indicator (D). If you do not see the indicator, you may be in an area that has only analog service or no service at all. If you see the digital signal indicator, you may be connected to a digital network that does not support Internet access.
<b>I launched the micro-browser but the display says: Data Server Unavailable.</b>	Try again in a few minutes. The servers may be temporarily busy.














# Programming Instructions

Follow this procedure if you need to program your phone's phone number(s) or system ID.

**Note:** Programming is normally done by a trained technician at the site of purchase. Users should not make changes other than ones in the following procedure.

Before programming, ask your service provider for your:

- 10-digit MIN (Mobile Identification Number)
- 8- to 15-digit IMSI (International Mobile Service Identifier)
- 8- to 15-digit MDN (Mobile Directory Number)
- 5-digit AMPS Sys ID number
- 5-digit CDMA Sys ID number

Do This	To
<p>1 Press , , , , , , , </p> <p>(These keys spell P-H-O-N-E + , , )</p>	open the user activation menu
<p>2 Press  </p>	scroll to <b>NAM1</b> (phone number 1) or <b>NAM2</b> (phone number 2)



Do This	To
<b>3</b> Press <b>SELECT</b> (⏎)	open the NAM programming menu
<b>4</b> Press the keypad keys for the 10-digit MIN	open the MIN editor and enter the new MIN
<b>5</b> Press <b>OK</b> (⏎)	store the new MIN
<b>6</b> Similarly, enter appropriate numbers for the IMSI, MDN, AMPS Sys ID, and CDMA Sys ID	
<b>7</b> Press <b>DONE</b> (⏎)	close the NAM programming menu
<b>8</b> Press <b>EXIT</b> (⏎)	close the user activation menu

# ***Specific Absorption Rate Data***

---

**This model phone meets the government's requirements for exposure to radio waves.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the U.S. Federal Communications Commission for the United States and by Health Canada for Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by Health Canada is 1.6 W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are

to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is  $1.27 \text{ W/kg}^2$ , and when worn on the body, as described in this user guide, is  $0.83 \text{ W/kg}^2$  (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure.

The FCC and Industry Canada have granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as being in compliance with the FCC and Health Canada RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of:

<http://www.fcc.gov/oet/fccid>

after searching on FCC ID IHDT56BJ2. You may also refer to Motorola's Web site:

<http://www.motorola.com/rfhealth>

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

ITC01-064

***The U.S. Food and Drug  
Administration's Center for  
Devices and Radiological Health  
Consumer Update on Mobile Phones***

---



FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known—and what remains unknown—about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

***Why the concern?***

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate any adverse health effects associated with the use of mobile phones.

## ***What kinds of phones are in question?***

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna—the primary source of the RF—and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

## ***How much evidence is there that hand-held mobile phones might be harmful?***

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use

of mobile phones. First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies that showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously—up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safety of mobile phones. This research has resulted in two findings in particular that merit additional study:

- 1 In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepitheliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain

cancers by the National Cancer Institute is expected to bear on the accuracy and repeatability of these results.<sup>1</sup>

- 2 Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus, follow-up research is necessary.<sup>2</sup>

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- 1 Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while



they performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.<sup>3</sup>

- 2 In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used.

Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.<sup>4</sup>

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

### ***What is known about cases of human cancer that have been reported in users of hand-held mobile phones?***

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the

U.S. population at a rate of about 6 new cases per 100,000 people each year. At that rate, assuming 80 million users of mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

### ***What is FDA's role concerning the safety of mobile phones?***

Under the law, FDA does not review the safety of radiation-emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile

phone industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- support needed research into possible biological effects of RF of the type emitted by mobile phones
- design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function
- cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health

At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

***In the absence of conclusive information about any possible risk, what can concerned individuals do?***

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if people

are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key factor in how much exposure a person receives. Those persons who spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle
- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package
- a headset with a remote antenna to a mobile phone carried at the waist

Again, the scientific data do not demonstrate that mobile phones are harmful. But if people are concerned about the radio frequency energy from these products, taking the simple precautions outlined above can reduce any possible risk.

### ***Where can I find additional information?***

For additional information, see the following Web sites:

**Federal Communications Commission (FCC)** RF Safety Program (select "Information on Human Exposure to RF

Fields from Cellular and PCS Radio Transmitters”):

<http://www.fcc.gov/oet/rfsafety>

**World Health Organization (WHO)** International Commission on Non-Ionizing Radiation Protection (select Qs & As): <http://www.who.int/emf>

**United Kingdom, National Radiological Protection Board:**  
<http://www.nrpb.org.uk>

**Cellular Telecommunications Industry Association (CTIA):** <http://www.wow-com.com>

**U.S. Food and Drug Administration (FDA)** Center for Devices and Radiological Health:  
<http://www.fda.gov/cdrh/consumer/>

1. Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.
2. Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, D.C.; and personal communication, unpublished results.
3. Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A. Effect of a 915-MHz simulated mobile phone signal on cognitive function in man. *Int. J. Radiat. Biol.*, April 8, 1999.
4. Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors: a case-control study. *Int. J. Oncol.*, 15: 113-116, 1999.

# Warranty

---

## ***Limited Warranty for Motorola Personal Communications Products and Accessories Purchased in the United States and Canada***

### ***I. What This Warranty Covers***

Defects in materials and workmanship in the following new **“Products”** manufactured, sold or certified by Motorola, with which this limited warranty is included in/on the package:

(a) wireless cellular telephones, pagers and two-way radios that operate via “Personal Radio Service” (such as Family Radio Service and General Mobile Radio Service), together with software imbedded in any of these products, and  
(b) subject to the following exceptions, accessories or software sold for use with these products.

- Battery Exception. This limited warranty extends only to batteries in which the fully-charged capacity falls below 80% of rated capacity and batteries that leak;
- Software Exceptions. This limited warranty extends only to physical defects in the media (such as CD-ROM) that tangibly embodies each copy of any software sold and/or certified by Motorola for use with Products. Software that is not tangibly embodied in media and that is purchased separately from Products (such as software that is downloaded from the internet) comes **“as is” and without warranty**.

## ***II. What the Period of Coverage Is***

Subject to the following exceptions, one year from the date the Products are purchased by the first end-user:

- 90-Day Warranty Exception. The warranty is for 90 days for: (a) any software tangibly embodied in media or (b) any accessories for two-way radios that are covered by this warranty, as described in Section I, above.
- Limited Lifetime Warranty Exception. The warranty is a limited lifetime warranty for the lifetime of ownership by the first end-user of the following products, **only**: (a) decorative covers, including bezel, PhoneWrap™ or case (any model); and (b) ear buds and boom headsets that transmit mono sound through a wire connection (this does **not** include ear buds or boom headsets that either transmit stereo sound or that are wireless, or both).
- Repair/Replacement Exception. The warranty is for the balance of the original warranty or for 90 days from the date returned and delivered to the first end-user, whichever is longer.

## ***III. Who is Covered***

This warranty extends to you only if you are the first end-user purchaser.

## ***IV. What We Will Do to Correct Warranty Problems***

At no charge to you, we have the option to repair or replace the Products that do not conform to the warranty, or to refund the Products' purchase price. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products or parts. No software updates are provided.

## ***V. How to Get Warranty Service***

**PLEASE CALL US — DO NOT SHIP:**

### **USA**

**Cellular 1-800-331-6456**

**Paging 1-800-548-9954**

**FRS Radios 1-800-353-2729**

**TTY (Text Telephone)**

**1-888-390-6456**

### **Canada**

**All Products**

**1-800-461-4575**

**TTY (Text Telephone)**

**1-888-390-6456**

Accessories and software—call the number designated for the product with which they are used.

You will receive instructions on how to ship the Products to Motorola or our designated resource. If instructed to ship the Products, you must ship them with freight, duties and insurance prepaid. Regardless of where you are instructed to return the Products, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider (if this Product requires subscription service); (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number. If requested, you must also return all detachable parts such as antennas, batteries and chargers. **RETAIN YOUR ORIGINAL PROOF OF PURCHASE.**

For Products we ask you ship to us, we will ship repaired or replacement Products at our expense for the freight and insurance, but at your expense for any duties. If additional information is needed, please contact us at the telephone number listed above.



## ***VI. What This Warranty Does Not Cover***

- **Products that are operated in combination with ancillary or peripheral equipment or software not furnished or otherwise certified by Motorola for use with the Products (“ancillary equipment”), or any damage to the Products or ancillary equipment as a result of such use. Among other things, “ancillary equipment” includes batteries, chargers, adaptors, and power supplies not manufactured or supplied by Motorola. Any of these voids the warranty.**
- Someone other than Motorola (or its authorized service centers) tests, adjusts, installs, maintains, alters, modifies or services the Products in any way. Any of these voids the warranty.
- Rechargeable batteries that: (a) are charged by other than the Motorola-approved battery charger specified for charging such batteries; (b) have any broken seals or show evidence of tampering; (c) are used in equipment other than the Product for which they are specified; or (d) are charged and stored at temperatures greater than 60 degrees centigrade. Any of these voids the warranty.
- Products that have: (a) serial numbers or date tags that have been removed, altered or obliterated; (b) board serial numbers that do not match each other, or board serial numbers that do not match the housing; or (c) nonconforming or non-Motorola housings or parts. Any of these voids the warranty.

- Defects or damage that result from: (a) use of the Products in a manner that is not normal or customary; (b) improper operation or misuse; (c) accident or neglect such as dropping the Products onto hard surfaces; (d) contact with water, rain, extreme humidity or heavy perspiration; (e) contact with sand, dirt or the like; or (f) contact with extreme heat, or spills of food or liquid.
- Physical damage to the surface of the Products, including scratches, cracks or other damage to a display screen, lens or other externally exposed parts.
- Failure of Products that is due primarily to any communication service or signal you may subscribe to or use with the Products.
- Coil cords that are stretched or that have any broken modular tabs.
- Leased Products.

Flat-rate repair rates may apply to Products not covered by this warranty. To obtain information about Products needing repairs that are not covered by this warranty, please call the telephone number previously listed. We will provide information on repair availability, rates, methods of payment, where to send the Products, etc.

## ***VII. Some Other Limitations***

**This is Motorola's complete warranty for the Products, and states your exclusive remedies. This warranty is given in lieu of all other express warranties. Implied warranties, including without limitation, the implied warranties of merchantability and fitness for a particular purpose, are given only if specifically required by applicable law. Otherwise, they are specifically excluded.**

**No warranty is made as to coverage, availability, or grade of service provided by the Products, whether through a service provider or otherwise.**

**No warranty is made that the software will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.**

**In no event shall Motorola be liable, whether in contract or tort (including negligence) for damages in excess of the purchase price of the Product, or for any indirect, incidental, special or consequential damages of any kind, or loss of revenue or profits, loss of business, loss of information or data, or other financial loss arising out of or in connection with the ability or inability to use the Products, to the full extent these damages may be disclaimed by law.**

## ***VIII. Patent and Software Provisions***

At Motorola's expense, we will defend you, and pay costs and damages that may be finally awarded against you, to the extent that a lawsuit is based on a claim that the Products directly infringe a United States patent. Our obligation is conditioned on: (a) you notifying us promptly in writing when you receive notice of the claim; (b) you giving us sole control of the defense of the suit and all negotiations for its settlement or compromise; and (c) should the Products become, or in Motorola's opinion be likely to become, the subject of a claim of infringement of a United States patent, you permit us, at our option and expense, either to: procure for you the right to continue using the Products; replace or modify them so that they become non-infringing; or grant you a credit for such Products, as depreciated, and accept their return. The depreciation will be an equal amount per year over the lifetime of the Products, as established by Motorola.

Motorola will have no liability to you with respect to any claim of patent infringement that is based upon the combination of the Products or parts furnished under this limited warranty with ancillary equipment, as defined in VI., above.

**This is Motorola's entire liability with respect to infringement of patents by the Products.**

## ***IX. State Law and Other Jurisdiction Rights***

Some states and other jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from jurisdiction to jurisdiction.

To obtain information on Motorola Personal Communications Products, including warranty service, accessories and optional Extended Warranties on selected Products, please call:

**USA**

**Cellular 1-800-331-6456**

**Paging 1-800-548-9954**

**FRS Radios 1-800-353-2729**

**TTY (Text Telephone)**

**1-888-390-6456**

**Canada**

**All Products**

**1-800-461-4575**

**TTY (Text Telephone)**

**1-888-390-6456**

Accessories and software—call the telephone number designated above for the product with which they are used.

**DO NOT SHIP PRODUCTS TO THESE ADDRESSES —  
INSTEAD PLEASE CALL.**

To correspond with Motorola about Products, please write us at: <http://www.motorola.com> or at:

In the USA:

Motorola, Inc.

600 North U.S. Highway 45

Libertyville, IL 60048

In Canada:

Motorola Canada Limited

5875 Whittle Road

Mississauga, ON L4Z 2H4

ITC01-078

**Warranty**

# ***Product Registration***

---

Online Product Registration:

<http://www.motorola.com/warranty>

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

## ***Export Law Assurances***

---

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

# Index

---

## A

### accessories

optional 10, 79, 104,  
119, 122

standard 18

accessory connector port  
1

### active line indicator

defined 24

illustration 23

**Add Digits** feature 62

alarm 74, 76

### alert

creating 93–98

defined 91

reminders, turning on/off  
98

selecting 91–92

turning off 30

### analog signal indicator

defined 24

illustration 23

animation 57

answering a call 22

antenna 1

application, locking 55

appointments. *See*  
datebook

**Attach Number** feature 32,  
62

auto PIN dial 56

automatic redial

turning on/off 56

using 28–29

## B

backlight 57

banner text 56

### battery

car kit charger time 121

charging 19–20

extending battery life  
25–27, 57

installing 18–19

level indicator 20, 23,  
24

meter 53

blackjack 114–??

block cursor, defined 39

browse text mode 40

browser alerts 51

browser. *See*  
micro-browser

## C

calculator 110–112

calendar. *See* datebook

call

adding digits after phone  
number 62

alert, creating 93–98

alert, selecting 91–92

alert, turning off 30

answer options 54

answering 22

call waiting 34

calling card 69

canceling 30

data call 125–127

datebook, opening 35

deleting 61–62

dialed calls list 33, 35,  
61–62

dialing 21

dialing a recent call  
61–62

emergency number 30

ending 22

fax call 125–127

in-call timer 54

incoming call type,  
setting 126–127

making 21

message center,  
accessing 35

muting 35

call (continued)

prefix digits, inserting  
32

received calls list 33,  
35, 61–62

receiving 22

recent calls 61–62

restricting 131–132

ring style, setting 91

speakerphone,  
activating 35

storing 61–62

three-way call 34

timing 63–65

unanswered call 29

voice dial 33

**Call Failed** message 28

call timers 63–65

resetting 65

viewing 65

call waiting 34

caller ID 29

calling card call 69

calling line identification.  
*See* caller ID

car kit

automatic answer 119

automatic hands-free  
120

charger time 121

power-off delay 120

clock 23



- codes
  - changing 128–129
  - default 21
  - if you forget a
    - code/password 129
  - original 128
- computer
  - connecting to phone 122–124
  - synchronizing data 72, 122
- contrast, display 57
- currency converter 112
- cursor 39
- customer service, calling 50
- customizing the menu 118

## D

- data call
  - connecting to external device 122–124
  - incoming call format, setting 126–127
  - receiving 126–127
  - sending 125
- date, setting 56
- datebook
  - adding an event 76
  - alarm 76
  - calendar 74
  - datebook (continued)
    - changing event information 76
    - copying an event 77
    - day view 75
    - deleting an event 78
    - event reminders, turning on/off 98
    - event view 75
    - reminders 76
    - week view 74
  - deleting a call 61–62
  - dialed calls list 33, 35, 61–62
  - dialing a number 21
  - Dialing Menu** 63
  - digital signal indicator
    - defined 24
    - illustration 23
  - display
    - animation 57
    - backlight 57
    - banner text 56
    - contrast 57
    - described 23–25
    - greeting 56
    - idle display 23
    - illustration 23
    - language 57
    - zoom setting 57
    - zooming in/out 25

drafts folder 51  
DTMF tones 35, 58, 62,  
138

## E

earpiece  
    illustration 1  
    volume, adjusting 25  
email  
    address, storing in  
        phonebook  
        66–68  
email, sending 71, 87–89  
emergency number 30  
end key  
    functions 1, 22  
    menu functions 36  
ending a call 22  
**Enter Unlock Code**  
    message 129, 131  
event alert 91–92  
exchange rate, calculating  
    112  
external device  
    connecting to phone  
        122–124  
    synchronizing data 72,  
        122

## F

factory settings, resetting  
    58–59  
fax call  
    connecting to external  
        device 122–124  
    incoming call format,  
        setting 126–127  
    receiving 126–127  
    sending 125  
flashing cursor, defined 39  
FM Stereo Radio Headset  
    50, 79–81

## G

games 113–117  
greeting, display 56

## H

hands-free mode  
    automatic answer 119  
    automatic call routing  
        120  
    charger time 121  
    defined 119  
    power-off delay 120  
    speakerphone,  
        activating 35

headset  
     automatic answer 119  
     FM Stereo Radio  
         Headset 50,  
         79–81

headset jack 1

## I

idle display, defined 23

in use indicator

    defined 24

    illustration 23

inbox, text message

    84–85

in-call timer 54

incoming call

    canceling 30

    type, setting 126–127

**Incoming Call** message

    29

indicators

    active line 23, 24

    battery level 20, 23, 24

    digital/analog signal 23,  
     24

    in use 23, 24

    loud ring style 25, 91

    menu 23, 24

    message waiting 23,  
     24, 85

    missed call 29

    ring style 23, 25, 91

indicators (continued)

    roam 23, 24

    signal strength 23, 24

    silent alert 25

    silent ring style 25, 91

    soft ring style 25, 91

    vibrate and ring style  
     25, 91

    vibrate style 25, 91

    voice message waiting  
     23, 24, 83

    voice name 66

iTAP software 45–48

## K

key

    end 1, 22, 36

    left soft key 1, 23, 36,  
     118

    lock 55, 131

    menu 1, 10, 24, 36

    power 1, 21

    right soft key 1, 23, 36,  
     118

    scroll 1, 36

    send 1, 21, 22, 61

    voice 1, 70, 102

    volume control 1, 25

keypad

- answering calls 54
- locking and unlocking  
55, 131
- volume, setting 92

## L

language, setting 57

left soft key

- customizing 118
- functions 1, 23, 36

lock

- applications 55
- keypad 55, 131
- phone 130–131
- voice notes 106

lock application feature 55

loud ring style indicator  
25, 91

**Low Battery** message 24

## M

making a call 21

master clear 59

master reset 58

**Memory is Full!** message  
85

menu

- Browser Menu** 109
- Calculator Menu** 110
- customizing 118
- Datebook Menu** 74, 75

menu (continued)

**Dialing Menu** 32, 63  
entering text 38–39,  
40–48

features 49–60

language, setting 57

**Last Calls Menu** 62

lists 37

locking applications 55

**My Tones Menu** 96, 97

navigating 10, 36

**Phonebook Menu** 66

**Quick Note Menu** 90

rearranging features  
118

scroll feature 57

**Text Msg Menu** 86–87

using features 10,  
37–39

**Voice Notes Menu** 103,  
104, 105

menu indicator

defined 24

illustration 23

menu key 1, 10, 24, 36

message

- browser alert 51
- deleting, text 85–87
- dialing number from 32
- drafts folder 51
- inbox setup, text  
message 84–85

message (continued)  
     locking, text 85–87  
     outbox 51, 90  
     quick note 89–90  
     reading, text 85–87  
     receiving, text 85  
     reminders, receiving 83,  
         85  
     reminders, turning on/off  
         98  
     sending 32, 87–89  
     status 90  
     text 84–90  
     voicemail 82–83  
 message waiting indicator  
     defined 24  
     displayed 85  
     illustration 23  
 micro-browser  
     browser alerts 51  
     using 108–109  
 microphone 1  
 mindblaster 116–117  
 missed call indicator 29  
**Missed Call** message 29  
 missed call, dialing 33  
 muting a call 35  
 my telephone number 22,  
     35, 53  
 my tones 93–98  
**My Tones Menu** 96, 97

## N

network settings 59  
 notepad  
     defined 63  
     entering digits 63  
     retrieving digits 63  
 number, viewing your own  
     53  
 numeric text mode 40

## O

one-touch dial  
     defined 31  
     using 31  
     voicemail number 31  
 optional accessory,  
     defined 10  
 optional feature, defined  
     10  
 outbox 51, 90

## P

paddleball 117  
 passwords. *See* codes  
 pause character 69  
 phone  
     active line indicator 24  
     alert, turning off 30  
     answer options 54  
     codes 128–129

phone (continued)  
     connecting to external device 122–124  
     erase user-entered information 59  
     feature specifications 35, 53  
     information 35  
     keypad, locking and unlocking 55, 131  
     locking 130–131  
     muting a call 35  
     reset all options 58  
     security code 128  
     specifications 35, 53  
     turning on/off 21  
     unlock code 21, 128, 129  
     unlocking 21, 130–131  
     voice dial 33  
 phone number  
     active line indicator 24  
     active phone line, changing 53  
     adding digits after 62  
     attaching to prefix digits 32  
     attaching two numbers 62  
     redialing 28  
     seeing your own 22, 35

phone number (continued)  
     sending text message to 32  
     storing in phonebook 66–68  
     viewing your own 53  
     voice dial 33  
 phonebook  
     attaching two numbers 62  
     deleting an entry 72  
     dialing a number 71  
     editing an entry 72  
     email address 66  
     entry details 66  
     entry name 66  
     number type indicator 66  
     one-touch dial 31  
     phone number 66  
     prefix digits, inserting 32  
     sending an email 71  
     sorting entries 73  
     speed dial number 66, 68  
     speed dial number, defined 31  
     speed dial, using 31  
     storing an entry 66–68  
     synchronizing entries 72, 122

phonebook (continued)  
    voice name entry 70  
    voice name indicator 66  
PIN code  
    dialing automatically 56  
    storing with phonebook  
        entry 69  
power key 1, 21  
predictive text entry 45–48

## Q

quick dial  
    changing number(s) 56  
    using 50  
quick note 89–90  
    defined 84

## R

radio 79–81  
received calls list 33, 35,  
    61–62  
recent calls 61–62  
redial  
    automatic redial 28–29  
    busy number 28  
reminders  
    datebook 76  
    defined 98  
    text message 85  
    turning on/off 98  
    voicemail message 83  
restricting calls 131–132

right soft key  
    customizing 118  
    functions 1, 23, 36  
ring alert  
    selecting 91–92  
    turning off 30  
ring style  
    customizing 91–92  
    defined 91  
    indicators 25, 91  
    setting 91  
ring style indicator  
    defined 25, 91  
    illustration 23  
ringer  
    volume, adjusting 25  
    volume, setting 92  
roam indicator  
    defined 24  
    illustration 23

## S

scroll feature 57  
scroll keys 1, 36  
security code  
    changing 128–129  
send key 1, 21, 22, 61  
short message service.  
    See text message

- shortcuts
  - creating 99–100
  - standard 99
  - using 101
- signal strength indicator
  - defined 24
  - illustration 23
- silent alert indicator 25
- silent ring style indicator 25, 91
- SMS. *See* text message
- soft keys
  - customizing 118
  - functions 23, 36
  - illustration 1
  - labels 23
- soft ring style indicator 25, 91
- speakerphone, activating 35
- speed dial
  - changing number 68
  - number, defined 31
  - sorting phonebook entries by 73
  - using 31
- standby time, increasing 27
- storing a call 61–62
- symbol text mode 44–45

- symbols, entering 44–45
- synchronizing data 72, 122

## T

- tap method text entry 41–43
- telephone number, viewing your own 53
- text
  - block cursor 39
  - browse mode 40
  - character chart 43
  - entering from keypad 40–48
  - entry mode, changing 40
  - flashing cursor 39
  - iTAP software predictive text entry 45–48
  - numeric mode 40
  - symbol chart 44
  - symbol mode 44–45
  - tap method 41–43
- text message
  - defined 84
  - deleting 85–87
  - dialing number from 32
  - drafts folder 51
  - inbox setup 84–85
  - locking 85–87
  - outbox 51



text message (continued)  
   quick note 89–90  
   reading 85–87  
   receiving 85  
   reminders 85  
   sending 32, 87–89  
   status 90  
 text mode, changing 40  
 three-way call 34  
 time, setting 56  
 timers 63–65  
   resetting 65  
   viewing 65  
 travel charger, using 20  
 TrueSync 72, 122

## U

unlock  
   keypad 55, 131  
   phone 130–131  
 unlock code 129  
   bypassing 129  
   changing 128–129  
   entering 21, 130, 131

## V

vibrate alert  
   selecting 91–92  
   turning off 30  
 vibrate and ring style  
   indicator 25, 91

vibrate ring style, setting  
   91  
 vibrate style  
   indicator 25, 91  
 voice dial  
   dialing a number 33, 71  
   recording voice name  
     70  
 voice key  
   dialing a number 33  
   functions 1  
   recording a voice name  
     70  
   recording a voice note  
     102  
 voice message waiting  
   indicator 23, 24, 83  
 voice name  
   defined 70  
   phonebook indicator 66  
   recording 70  
 voice notes 102–107  
 voice shortcut  
   creating 99–100  
   defined 99  
   using 101  
 voicemail  
   dialing with one-touch  
     dial 31  
   reminders, turning on/off  
     98  
   using 82–83

volume  
    earpiece 25  
    keypad 92  
    ringer 25, 92  
volume keys 1, 25

## W

wait character 69  
warranty 156–163  
Web pages 108–109

## Z

zoom setting 57  
zooming in/out 25



**MOTOROLA**

# ***Wireless Phone Safety Tips***

*“Safety is your most important call!”*


**Your Motorola wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.**

**When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:**

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.



- 2 **When available, use a hands-free device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ hands-free accessories available today.
- 3 **Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 **If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 **Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.

- 
- 8 **Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.\*
- 9 **Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.\*
- 10 **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.\*

\* Wherever wireless phone service is available.

**Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.**



For more information,  
please call  
1-888-901-SAFE  
or visit the  
CTIA Web site at  
[www.wow-com.com](http://www.wow-com.com)<sup>TM</sup>

ITC00-011





**motorola.com**

**8988485L49-O**